 




折疊方式：

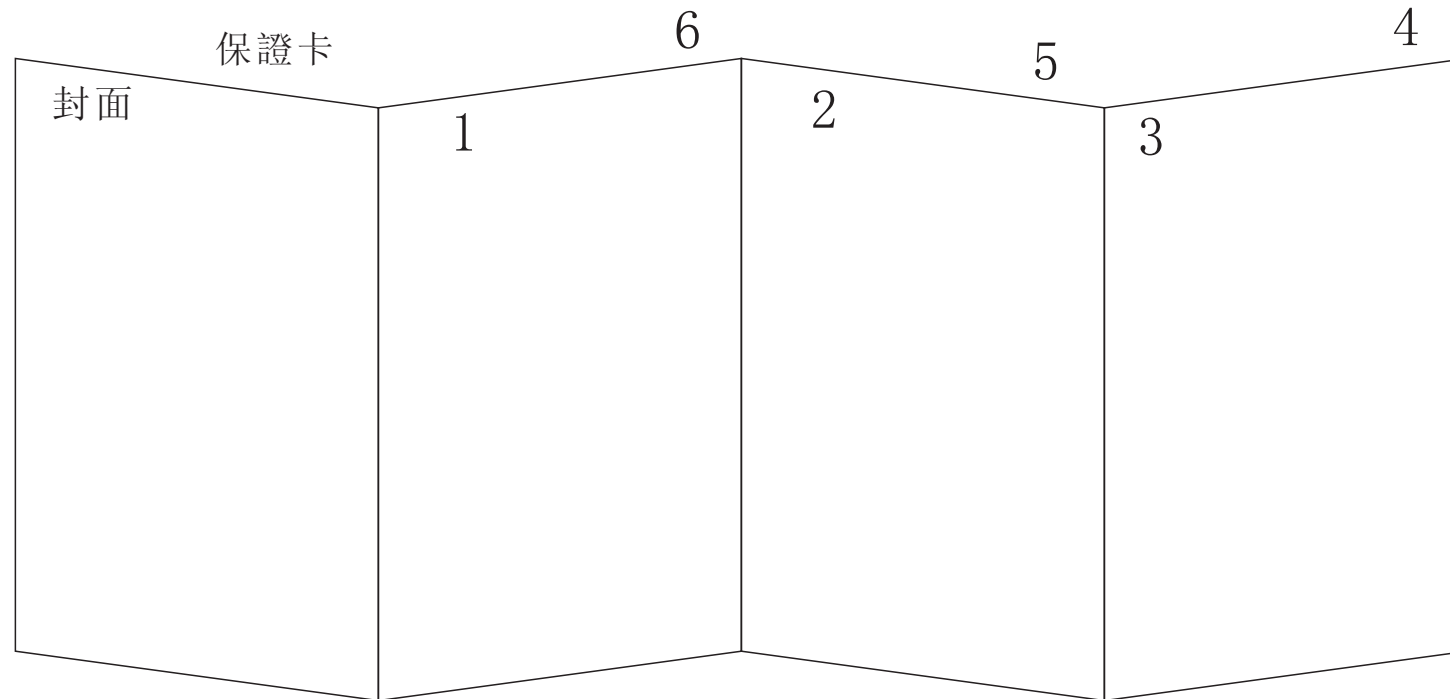

成品尺寸: 80 x 110mm  
 展開尺寸: 320 x 110mm  
 黑色雙面印刷  
 虛線為折綫

|                                   |               |          |    |        |     |                  |                             |                             |                             |       |
|-----------------------------------|---------------|----------|----|--------|-----|------------------|-----------------------------|-----------------------------|-----------------------------|-------|
| 圖<br>框                            | 春合昌電器(深圳)有限公司 |          |    |        |     | 一般公差<br>(未勾選按A級) | <input type="checkbox"/> A級 | <input type="checkbox"/> B級 | <input type="checkbox"/> C級 |       |
|                                   | 圖名            | DS-28說明書 |    | 核準     |     | 0~30             | ±0.10                       | ±0.20                       | ±0.50                       |       |
|                                   | 料號            |          |    | 審核     |     | 30~120           | ±0.15                       | ±0.35                       | ±1.00                       |       |
|                                   | 單位/比例         | mm / 1:1 | 材質 | 80G銅版紙 | 制圖  | 董文君20120730      | 120~315                     | ±0.20                       | ±0.50                       | ±1.20 |
|                                   | 表面處理          |          | 環保 | 需環保    | 原設計 |                  | 315~                        | ±0.30                       | ±0.70                       | ±1.50 |
| 注：本公司在開發設計時不用KYE-021101規定一級環境管理物質 |               |          |    |        |     |                  |                             | 版次                          | A                           |       |
| 設<br>變<br>記<br>錄                  |               |          |    |        |     |                  |                             |                             |                             |       |



# Daybreak DJ Alarm Clock User's Guide

## Please read and understand all instructions before use.




iPhone and iPod are trademarks of Apple Inc., registered in the U.S. and other countries.

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

### IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water or moisture.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not push objects into apparatus vents or slots because fire or electric shock hazards could result.
- Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table cloth, curtains, etc.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Place apparatus in a stable location so it will not fall causing product damage or bodily harm.
- Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. The wider blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Operate the apparatus only from the low level audio line output jack of the computer or of an audio device.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- The apparatus shall be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the apparatus from the AC mains receptacle.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords or integral convenience receptacles.
- Use proper power source as described in the instructions or as marked on the product.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

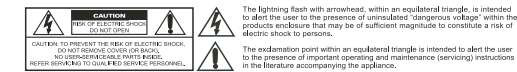

**WARNING**  
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. THE UNIT SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON UNIT.

- Battery Warning Statement:**
- Do not mix old and new batteries (replace all batteries at the same time).
  - Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.

**ENVIRONMENTAL PROTECTION RECOMMENDATION**  
At the end of its working life, this product should not be disposed of with standard household waste, but rather dropped off at a collection point for the disposal of Waste Electrical and Electronic Equipment (WEEE) for recycling. This is confirmed by the symbol found on the product, user manual or packaging.

### Note:


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Caution to user:

Any changes or modifications to the product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### PRODUCT OVERVIEW

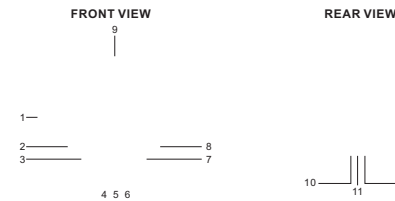

1. Speaker
2. Power (⏻) / Source button
3. Set / Time / Play (▶) button
4. Tune- / Previous (◀) button
5. Tune+ / Previous (▶) button
6. Volume- / Up / Alarm button
7. Volume+ / Down / Alarm button
8. Snooze
9. iPod / iPhone dock
10. DC jack
11. FM antenna
12. AUX IN jack
13. Battery Compartment

### CONTROL FUNCTIONS

1. ⏻ / SOURCE  
**Power:** Press to power on the speaker; press and hold to turn off / standby the unit.  
**Source:** Press to change between audio sources, IPOD-RADIO-AUX.
2. SET / ▶  
**In iPod mode:** press to play or pause the track.  
**In Standby mode:** press to set the clock time.  
**In FM Radio mode:** press and hold to save the current radio station as a preset station. (20 preset modes)  
**In Radio mode:** press to play the preset station.
3. ◀  
**iPod mode:** Play the previous track.  
**Radio mode:** Search the lower range of radio channels Search for a lower.  
**Stand-by mode:** Decreases the hour or minute.
4. ▶  
**iPod mode:** Play the next track.  
**Radio mode:** Search the upper range of radio channels.  
**Stand-by mode:** Increases the hour or minute.
5. VOL+ : Press to increase the volume.  
When the speaker is turned off, press to set the alarm.
6. VOL- : Press to increase the volume.  
When the speaker is turned off, press to set the alarm.
7. SNOOZE : When the alarm sounds, press the SNOOZE button to activate the snooze function. The alarm will stop and will sound again in 9 minutes.

### POWER ON/ OFF THE SPEAKER

**Use ONE of the following options to power the speaker:**  
**AC Adapter (Power Outlet)**  
Connect the power adaptor cord into the DC jack of the speaker, then plug the power adaptor into a power outlet.  
Press (⏻ / SOURCE) button to power on the speaker. Press and hold the button to turn off the speaker.

**Batteries**  
Insert 6 x AA batteries (not included) as illustrated into the battery compartment. Press (⏻ / SOURCE) button to power on the speaker.

**Note:**  
All 6xAA batteries are required in order for the speaker to operate normally. If there is a power shortage, the inner 2 AA batteries will act as a backup source to prevent the loss of display time and settings during power failure.  
When using batteries, the charging function of the speaker will not charge your iPod or iPhone. Must use the power adapter (included) for charging.

### SETTING THE CLOCK (STANBY mode)

- To set the clock, turn off the speaker by pressing and holding down the (⏻ / SOURCE) button.
- Press [Set/▶] button to enter into clock setting mode.
  - Press the [◀] or [▶] button to adjust up and down the hour.
  - Press [Set] to confirm hour.
  - Press the [◀] or [▶] button to adjust up and down the minutes.
  - Press [Set] to confirm the time.
  - The time format is a 12 hour format. For evening hours adjust up or down the clock until the pm indicator is shown as a dot in between the hour and minutes (refer to picture).
  - The speaker system has a time sync function with iPod or iPhone. When you dock your

## 保證卡

iPod or iPhone in the cradle, the speaker will automatically sync the clock time with your iPod or iPhone. Please note this function will not work with older iPods or iPhones (reference to package for compatible iPod and iPhone models).



 
 
### SETTING THE ALARM (STANBY mode)

- To set the alarm, turn off the speaker by pressing and holding down the (⏻ / SOURCE) button.
- Press and hold down [Vol-] or [Vol+] button for 2 seconds, the alarm time will flash.
  - Press [◀] or [▶] button to adjust up and down the alarm hour.
  - Press [Vol-] or [Vol+] to confirm hour.
  - Press the [◀] or [▶] button to adjust up and down the alarm minutes.
  - Press [Vol-] or [Vol+] to confirm the alarm time.
  - The time format is a 12 hour format. For evening hours adjust up or down the time until the pm indicator is shown as a dot in between the hours and minutes (refer to picture).



### ALARM SOURCE

Make sure the speaker is still in OFF or standby mode in order to turn on the alarm source. Press [Vol-] or [Vol+] button repeatedly to select between the alarm source, OFF-bu-rd-IPOD.

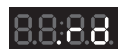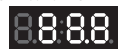

If iPod is selected and iPod is not connected, when the alarm sounds it will automatically switch to buzzer sound

Select your choice of alarm source and remain on the display, after 3 seconds the alarm source is set. When the alarm is set, the display will show the alarm indicator which is a dot in between the 2 digit hour time. To cancel or turn off the alarm, follow instructions for Setting the Alarm. Press [Vol-] or [Vol+] button to select alarm source to OFF, the alarm indicator will turn off.



### ALARM OPERATION

When the alarm sounds, the alarm indicator will flash and the volume will increase gradually. It will continue to sound and last for one hour. To stop the alarm, press the (⏻ / SOURCE) button. The alarm indicator will remain illuminated and the alarm will sound again at the same time the following day. To snooze, press [SNOOZE] button to activate snooze function, the alarm will sound again approximately after nine minutes. To cancel the alarm, follow instructions for Setting the Alarm. Press [Vol-] or [Vol+] button to select alarm source to OFF, the alarm indicator will turn off.

### USING THE IPOD/IPHONE

- Turn on the speaker system by holding the (⏻ / SOURCE) button Insert your iPod or iPhone into the docking.
- Press (⏻ / SOURCE) button until the display shows IPOD.
  - Press the [▶] button to play or pause the docked iPod or iPhone.
  - Press [▶] or [◀] button to play the previous or next track.
  - To fast forward or rewind, press and hold down [▶] or [◀] buttons respectively when playing.
  - Adjust the volume using the [VOL-] or [VOL+] buttons.

**Note:**  
The iPod or iPhone will charge when using AC power adapter during standby or power on mode. The clock will automatically sync to the time of the docked iPod or iPhone. Auto time sync will not work with some older model iPods. (Reference package for compatible model) It is advisable to avoid charging the iPod when listening to the radio as it may interfere with the radio reception.

### SETTING THE RADIO

- Turn on the speaker, then press (⏻ / SOURCE) button repeatedly until the FM frequency is shown on the display.
- To search radio stations automatically, press and hold the [▶] button or [◀] button for a few seconds. The radio will start navigating up or down the radio frequency. When a radio station is located, the search will stop.
- To manually tune the radio, press the [▶] or [◀] button each repeatedly until desired station is located.
- Extend or move the antenna for best frequency reception.
- Adjust the volume by pressing the [VOL-] or [VOL+] buttons.

### PRE-SET RADIO STATIONS

The system has 20 pre-set radio functions that can be programmed First, search and locate the FM station you desired.

- Press and hold the [SET/▶] button for 2 seconds until the display flashes preset channel number "PXX" (XX represent channel number 01 to 20).
- Press [▶] or [◀] buttons to select pre-set number from 1 to 20.
- Press [SET/▶] button to save the radio station as pre-set station.
- Repeat the above steps to further store other pre-set FM stations.
- After you have saved the pre-set stations, press the [SET/▶] button to select to listen to the desired pre-set FM station.

### CONNECTING TO OTHER AUDIO SOURCES

The system is compatible to play other audio sources such as MP3 player, portable CD player or other auxiliary devices through the AUX IN jack.

- Press the (⏻ / SOURCE) button repeatedly until "AUX" is shown on the display.
- Connect the auxiliary devices using a 3.5mm jack cable into the "AUX IN" jack of the speaker.
- Control the settings directly from the connected auxiliary device to play, pause or adjust the volume.

### TROUBLESHOOTING GUIDE

| SYMPTOM                          | POSSIBLE PROBLEM                             | SOLUTION  |
|----------------------------------|--|---|
| The speaker system does not work | Power isn't turned on.                       | <ul style="list-style-type: none"> <li>Make sure the system is powered on and the LCD is illuminated.</li> <li>When using AC adapter as the power source, make sure the power cord is connected to the system and the AC adapter is plugged into the power outlet.</li> </ul>                     |
| No sound                         | Volume is set too low.                       | <ul style="list-style-type: none"> <li>Increase the volume from the speaker system.</li> <li>Increase the volume from the audio source and set it to the medium level.</li> </ul>   |
| iPod/iPhone does not play        | Problem with audio source.                   | <ul style="list-style-type: none"> <li>Make sure the audio source is fully connected to the correct input.</li> <li>Use an alternate audio source to test the speakers.</li> </ul>  |
| Auxiliary device does not play   | iPod/iPhone is not installed properly.       | <ul style="list-style-type: none"> <li>Make sure the adapter is the proper one for your iPhone or iPod.</li> </ul>  |
| Volume is set too low.           | Problem with audio source.                   | <ul style="list-style-type: none"> <li>Make sure the iPod/iPhone is fully connected into the docking.</li> <li>Press [MODE / ⏻] button make sure the system is powered on and change the input to "DOCK".</li> <li>Make sure the audio source is fully connected to the correct input.</li> </ul> |
| Sound is distorted               | Source input is not selected to iPod/iPhone. | <ul style="list-style-type: none"> <li>Press [MODE / ⏻] button make sure the system is powered on and change the input to "AUX".</li> <li>Make sure the audio source is playing and increase the volume if necessary.</li> </ul>  |
| Weak radio reception             | Volume level is set too high.                | <ul style="list-style-type: none"> <li>Use an alternate audio source to test the speakers.</li> <li>Decrease the volume.</li> </ul>   |
| Alarm function does not work     | Sound source is distorted.                   | <ul style="list-style-type: none"> <li>If the iPhone or iPod original sound source (sound file) is of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD.</li> </ul>   |
| Sleep function does not work     | Poor reception.                              | <ul style="list-style-type: none"> <li>Extend or adjust the position of FM antenna.</li> </ul>  |
|                                  | Alarm is not activated.                      | <ul style="list-style-type: none"> <li>Make sure the alarm is activated with alarm source, the alarm icon should display on the LCD.</li> </ul>   |
|                                  | Time format is not correct.                  | <ul style="list-style-type: none"> <li>Check if the alarm is set with 12 or 24-hour time format, with the correct "am" or "pm" time.</li> <li>Check if the clock is set with 12 or 24-hour time format.</li> </ul>  |
|                                  | Sleep function is not activated.             | <ul style="list-style-type: none"> <li>Make sure the sleep function is activated, the sleep indicator should display on the LCD.</li> </ul>   |

### LIMITED WARRANTY

Kinyo Company Inc. (KINYO) warrants this product to the original purchase against defects in material and workmanship for a period of one (1) year from the date of purchase. Kinyo will, at its option, repair or replace the defective product at no cost to you during the warranty period.

The warranty will not apply if the unit has been subject to accident, misuse, abuse, disassembly, altered or operated contrary to the instructions contained in the accompanying manual.

To obtain warranty service, proof of purchase, in the form of retail receipt, bill of sale or invoice must be presented as evidence that the unit is within the warranty period. The product must be packaged either in its original package or in such a way as to reasonably protect it from shipping damage. Properly fill out the warranty card with description of problem. Send the product freight prepaid or deliver to:

ATTN: SERVICE DEPT. KINYO COMPANY INC.  
14235 LOMITAS AVE., LA PUENTE, CA 91746

### ONE YEAR LIMITED WARRANTY CERTIFICATE

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_ STATE \_\_\_\_\_ ZIP \_\_\_\_\_

PHONE \_\_\_\_\_ EMAIL \_\_\_\_\_ MODEL# \_\_\_\_\_

DATE OF PURCHASE \_\_\_\_\_ WHERE PURCHASED \_\_\_\_\_

PROBLEM \_\_\_\_\_

SIGNATURE \_\_\_\_\_ DATE \_\_\_\_\_

\*This warranty is only valid in the United States of America.