

Bradley Funnel Pendant

CAUTION:

Do not install into a ceiling that contains radiant heating. Also note that the Closed Toggle Hook (F) and Open Metal Hooks (I) or Closed Metal Hook (K) and Open Metal Hooks (J) that are included with this Bradley Funnel Pendant is used to support the electric cord only. Do not use the electric cord only (without the rope) to support the weight of the lighting fixture.

Important Safety Instructions:

- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it-contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- The ceiling Closed Toggle Hook (F) and Open Metal Hooks (I) is meant for drywall mounting only. Closed Metal Hook (K) and Open Metal Hooks (J) are meant for direct wood or ceiling-joist mounting (or through drywall to wood joist) only. If the ceiling is made from concrete, brick or plaster, please consult your local hardware store for assistance.
- The installation is not to be installed on a radiant-heating ceiling.
- Wood ceiling joist mounting is recommended. Use proper hardware for your ceiling type.
- For your safety, it is strongly recommended that two people install the lighting fixture.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling and installing the fixture.
- This fixture has been rated for up to one (1) 60-watt maximum TYPE A standard bulb (not included) or one (1)
 13-watt compact fluorescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.
- The lighting fixture is meant for indoor use, DRY LOCATIONS ONLY.
- Save these instructions.

WARNING:

- To reduce the risk of fire, electrical shock or personal injury, always turn off and unplug light fixture and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- For your safety and convenience, assembly by two people is recommended.

Parts Included:Hardware Enclosed:(1) Finial (A)(1) Closed Toggle Hook (F)(1) Diffuser (B)(2) Plastic Fasteners (G)(1) Metal Shade (C)(1) Open Toggle Hook (I)(2) Big Metal Round Hook (D) (E)(2) Open Metal Hooks (J)(1) Cord Set (H)(1) Closed Metal Hook (K)


TOOLS REQUIRED (not included): Ladder, Pliers, Drill & Drill bit.

Assembly & Installation Instructions:

- 1. Carefully unpack all fixture parts and hardware and lay them out on a clear workspace.
- 2. Adjust the length of the linen rope for your installation.
- 3. Insert the Metal Hooks (J) and (K) into the ceiling joists at the desired locations. Rotate each hook clockwise while firmly pressing it into the ceiling. Tighten hooks securely into wood. If installing through drywall to wood joist, the threaded portion of each hook will drive itself into the drywall and then into the underlying wooden ceiling joist. Note: Pre-drilling a pilot hole at the marked locations will make installing the hooks easier.
- 4. If mounting into ceiling drywall only, use the **assembled** Toggle Hooks (F) and (I) inserted through two predrilled ceiling holes using the drill with appropriate size drill bit (one that is sized just large enough to make a hole that will allow passage of the wings of the toggle). Make sure the Toggle Hooks (F) and (I) are fully inserted into the ceiling and the toggle wings are open. Use your hand to rotate the Toggle Hooks in a clockwise direction until tight against ceiling.
- Once the hooks are installed into the ceiling, Hang plastic fasteners (G) onto the two cord swag hooks as shown (Fig.4 & Fig 3)
- Insert one (1) 60-watt maximum TYPE A standard incandescent bulb (not included) or one (1) 13-watt compact fluorescent bulb (not included) into socket. DO NOT EXCEED THE SPECIFIED WATTAGE.
- 7. Attach the diffuser (B) on the harp and secure by the finial (A) as shown.
- 8. Hang the Metal Shade (C) through the Big Metal Round Hook (D) (Fig.1).
- 9. Hang the Big Metal Round Hook (E) through the Closed Toggle Hook (F) or the Closed Metal Hook (K).
- 10. Plug fixture into the proper electrical outlet and test fixture.
- 11. Assembly and Installation is complete.

Care instructions:

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

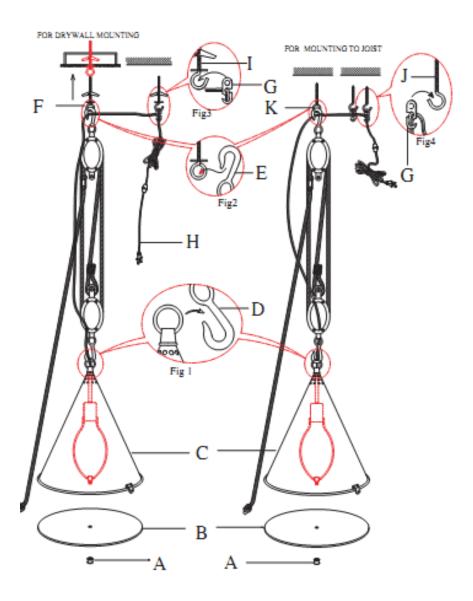

Thank you for your purchase stores | catalog | www.pbteen.com USA 1.866.472.4001