


PALLET LOUNGE TABLE

ASSEMBLY INSTRUCTIONS

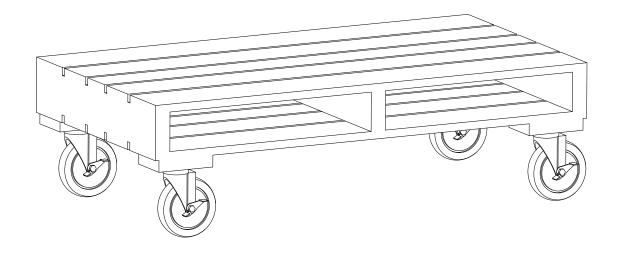

Date: 2013-3-18 Rev: 2013-3-18

Important Safety Instructions:

- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:


- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

Parts Included:

(A) Top

(B) Caster 4x


1x

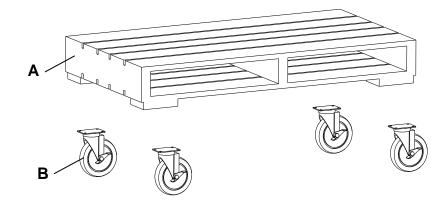

Hardware Included:


(C) Bolt	(D) Spring Washer	(E) Flat Washer
Ø1/4" x 3/4"		
16 x	16 x	16 x

Tools Required:

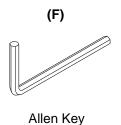

Assembly Instruction Steps:

1. Attach casters (B) to Top (A) with Bolts (C), Spring Washers (E) and Flat Washers (D) using Allen Key (F).

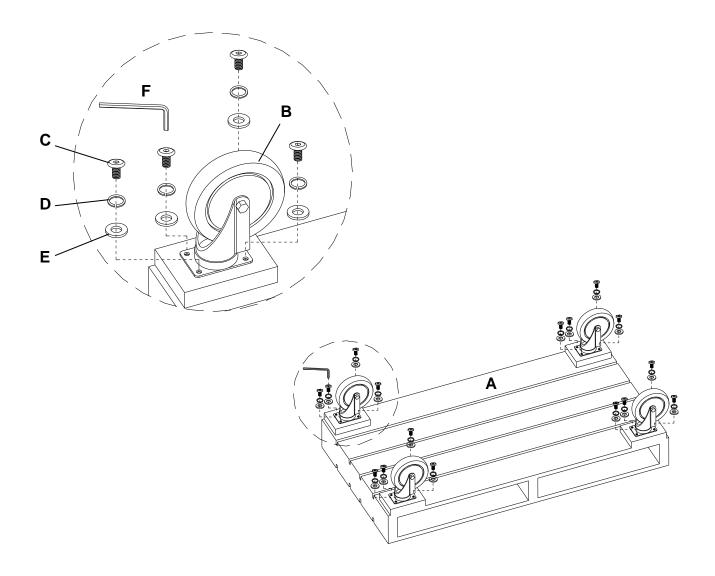

Care Instructions:

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight.
 Re-tighten if necessary.