 


Karaoke Machine

MODEL # HB-131

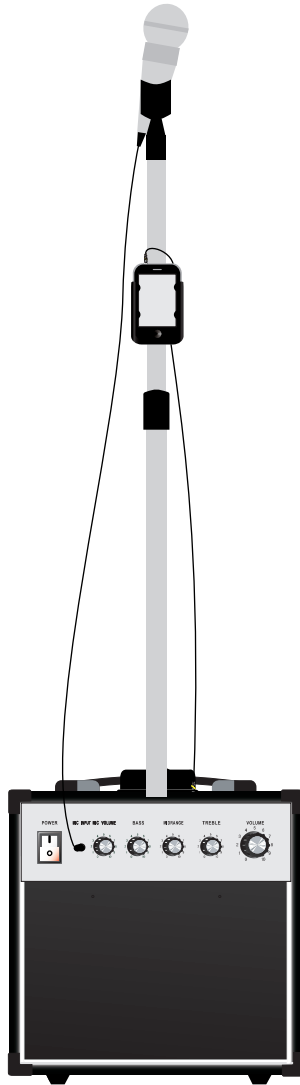

Instruction Manual

Read these instructions completely before use and keep for future reference.

DETAILED SAFETY INSTRUCTIONS:

All the safety and operation instructions should be read before the unit is operated.

1. The unit should not be used near water (e. g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool etc.).
2. The unit should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
3. Do not install in an area which impedes the access to the power plug. Disconnecting the power plug is the only way to completely remove power to the product and must be readily accessible at all times.
4. Power source – Use only power supplies of the type specified in the operating instructions or as marked on the appliance. If a separate power supply is included with this apparatus, do not substitute with any other power supply – use only manufacturer-provided power supplies.
5. Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock hazards!
6. Immediately turn amplifier power off when not in use.
7. Disconnect the power plug from the power outlet during lightning storms or if the unit is to remain unused for an extended period of time.
8. This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
9. Never use or store the unit in places that are:
 - Subject to temperature extremes (e. g. direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
 - Damp (e. g. baths, washrooms, on wet floors); or are
 - Humid; or are
 - Exposed to rain; or are
 - Dusty; or are
 - Subject to high levels of vibration.
10. This unit must be properly grounded.
11. Do not open (or modify in any way) the unit or its AC adaptor.
12. The AC adaptor will begin to generate heat after long hours of consecutive use. This is normal, and is not a cause for concern.
13. This amplifier should only be serviced by a qualified repair technician.
14. Do not place this product on an unstable surface. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a stand, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
15. Move the appliance with care to avoid damage or injury.
16. For everyday cleaning wipe the unit with a soft, dry cloth. Do not use benzene, thinners, alcohol or solvents of any kind. To avoid the possibility of discoloration and or deformation.
17. Before cleaning the unit, turn off the power and unplug the AC adaptor.



SAFETY INSTRUCTIONS:

CAUTION: To reduce the risk of electrical shock do not remove the cover (or back). No user serviceable parts inside; refer servicing to qualified technician.

WARNING: To reduce the risk of fire or electrical shock, do not expose this unit to rain or moisture.

SPECIFICATIONS




POWER SUPPLY: Input DC 18V 1. 2A

Speaker: 1*6.5"

Weight (kg): 5.3kg

Size (mm) W, H, D: 315*325*270



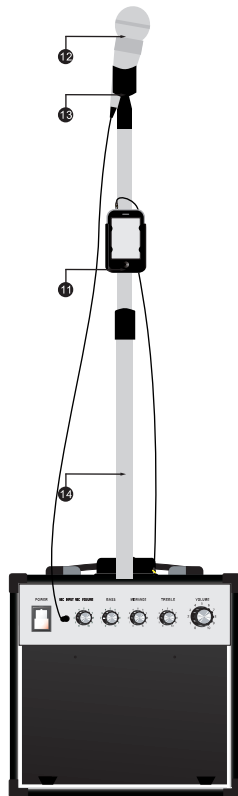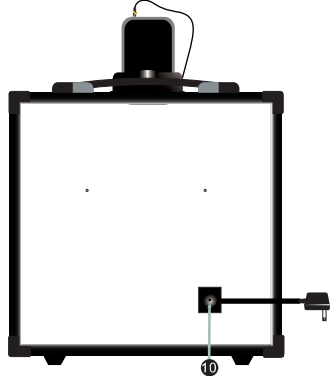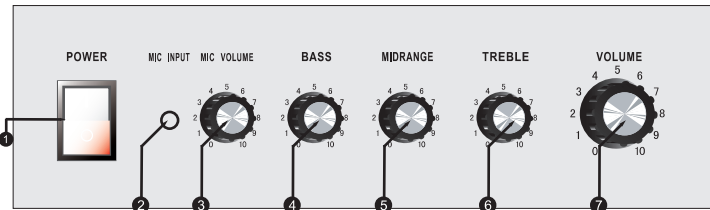

1. POWER Switch

The power switch turns your amplifier on and off. The LED on the switch will light up when your amplifier is turned on. It will not light up when the amplifier is turned off.

2. MIC INPUT Jack

The 3.5MM MIC Input Jack located on the front panel.

3. MIC VOLUME knob

Adjusts the volume level of the microphone.

4. BASS Knob

Adjusts the tone quality of the bass range.

5. MIDRANGE Knob

Adjusts the tone quality of the midrange.

6. TREBLE Knob

Adjusts the level of the treble range.

7. VOLUME Knob

Adjusts the Volume of amplifier.

8. IPOD/IPHONE Socket

The iPod®/iPhone® socket on top of the amplifier is large enough to accommodate an iPod/iPhone and hold it securely in the vertical position.

9. IPOD/IPHONE INPUT Jack

The 3.5MM MP3 Input Jack on the top panel allows the connection of an external audio source e.g. MP3 or iPhone. Use a high quality cable to prevent noise, interference and unwanted feedback.

10. AC Adaptor Jack

Accepts the connection of an AC Adaptor.

11. IPOD/IPHONE Holder Jack

12. MICROPHONE

13. MICROPHONE HOLDER

14. MICROPHONE STAND

ASSEMBLY

1. Assemble the microphone stand and holder.
2. Slide the microphone into the microphone holder.
3. Plug the microphone into the front panel socket.
4. Connect the adaptor cord to the jack at the back of the unit.
5. Plug the adaptor into the wall outlet. Before switching on the unit, make sure that the voltage of your electrical supply is the same as that Indicated on the rating plate.

NOTE: Before connecting to a power source, always ensure that your amplifier is compatible with your electrical supply. If you have any doubt, please get advice from a qualified technician.

Please ensure the amplifier is switched off and unplugged from the power supply before being moved.

FCC Statement

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CALIFORNIA PROP 65 WARNING

"WARNING" This product contains chemicals known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log onto the following website address: <http://www.oehha.ca.gov/prop65.html>

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

Henley Brands, LLC.

Limited Warranty: 90 Days Labor, One Year Parts

Henley Brands, L.L.C. (HB) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. HB agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that HB will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at below toll free number to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (HB) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage.

Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of

- USD\$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)
- USD\$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)
- USD\$16.00, for items \$100.00 and up. (Price Paid Per Unit)
- Shipping fees are non-refundable

to be payable to Henley Brands, L.L.C.(for handling and return shipping charges)

(HB) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information.

Henley Brands LLC.
1 Channel Drive
Port Washington, NY 11050
Toll free: 1-877-483-2497

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (HB) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.