 


**PB**  
teen

## 2810 ULTIMATE JAM BLUETOOTH® SPEAKER User's Guide

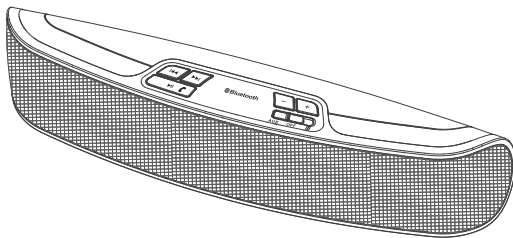

### Please read and understand all safety instructions before use.

 
 
 
The *Bluetooth*® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kinyo Company is under license.

### INTRODUCTION

The Ultimate Jam *Bluetooth*® Speaker is compliant with *Bluetooth* version 3.0. The system supports *Bluetooth* A2DP<sup>1</sup>, AVRCP<sup>2</sup>, Headset and Hands-free profiles. The system is capable of streaming music from mobile phones, MP3 players, portable media players, PDA's, computers and other audio devices with *Bluetooth* A2DP enabled. This system operates wirelessly from audio sources up to 33 feet (10 meters) away open space. The built-in microphone, enables to easily answer phone calls hands-free through the system. The system also comes with an auxiliary input that will connect all line in audio sources.


- 1) The playback and its plug-in *Bluetooth* adapter/transmitter/device needs to support A2DP (Advanced Audio Distribution Profile).
- 2) The playback and its plug-in *Bluetooth* adapter/transmitter/device needs support AVRCP (Audio/Video Remote Control Profile).

### Box Contents

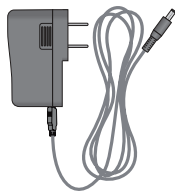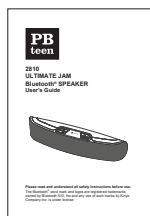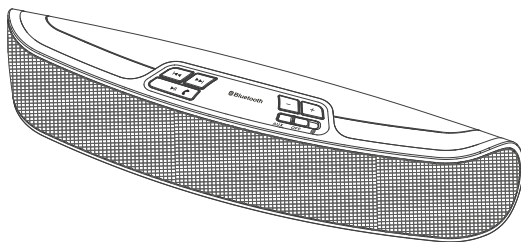

### IMPORTANT SAFETY INSTRUCTIONS

 - Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water or moisture.
- Clean only with a dry cloth.
- Do not block any ventilation openings.
- Installing accordance with the manufacturer's instructions.
- Do not push objects into apparatus vents or slots because fire or electric shock hazards could result.
- Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table cloth, curtains, etc.
- Do not install near any heat sources as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Place apparatus in a stable location so it will not fall causing product damage or bodily harm.
- Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. The wider blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- The apparatus shall be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the apparatus from the main AC outlet.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- To prevent risk of fire or electric shock, avoid overloading wall outlets and extension cord.
- Use the proper power source as described in the instructions or as marked on the product.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

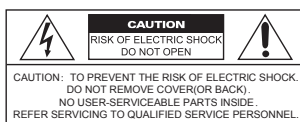

The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the appliance.

### WARNING

TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER(OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. THE UNIT SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON UNIT.



### ENVIRONMENTAL PROTECTION RECOMMENDATION

At the end of its working life, this product should not be disposed of with standard household Waste, but rather dropped off at a collection point for the disposal of Waste Electrical and Electronic Equipment(WEEE)for recycling. This confirmed by the symbol found on the product, user manual or packaging.

### Battery Warning Statement:

- Do not mix old and new batteries (replace all batteries at the same time).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.

### FCC

The speaker complies with FCC RF radiation exposure limits set forth for general population. The system must not be collocated or operating in conjunction with any other antennas or transmitters.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

 
 
**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### PRODUCT OVERVIEW

Top

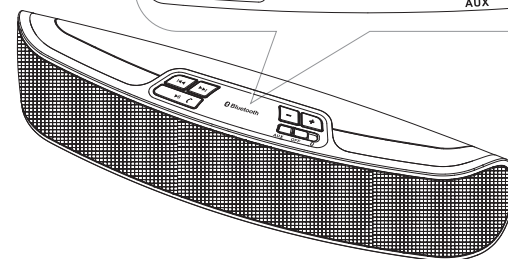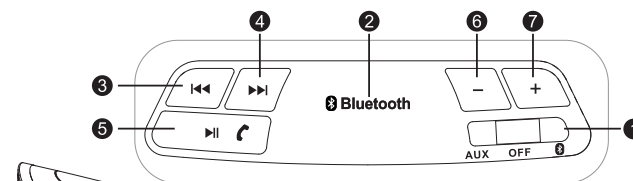

Bottom

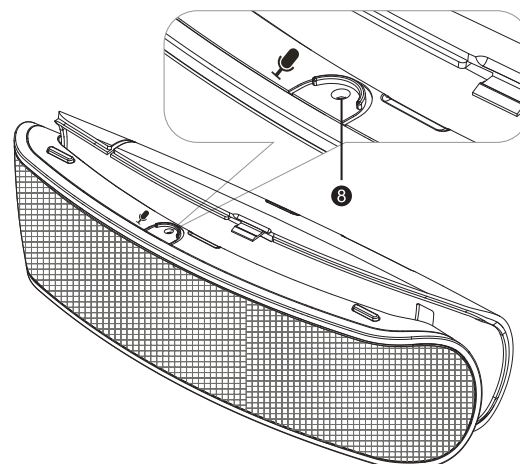 

### ON/OFF Switch

- a) **ON**: Slide switch to the right for *Bluetooth* operation. (The speaker attempts to connect to the last paired device. See pairing instructions on page 7.)
- b) **OFF**: Slide switch to the middle to turn the system off.
- c) **AUX**: Slide switch to the left for Auxiliary input.

### BLUETOOTH PAIRING LED Indicator / Low Battery Indicator:

- a) **BLUETOOTH PAIRING LED Indicator:**  
The *Bluetooth* LED will flash blue and red light alternately to indicate that the *Bluetooth* speaker enters pairing mode. When the *Bluetooth* device has successfully paired and connected with the *Bluetooth* speaker. The *Bluetooth* LED will flash blue light constantly. If the *Bluetooth* connection is disconnected, the blue LED will flash three times to indicate the *Bluetooth* signal is disconnected.
- b) **Low Battery Indicator:** Red LED Indicator will flash when battery is low. (only during *Bluetooth* operation)

**◀**: Press to play the previous selection. (only during *Bluetooth* operation)

**▶**: Press to play the next selection. (only during *Bluetooth* operation)

**▶/⏸/☎**: **PAIRING / PLAY / PAUSE / CALL** (only during *Bluetooth* operation)

- a) **PAIRING:** Press and hold for 3 seconds to set the speaker to discoverable mode and allow pairing with another *Bluetooth* device. The *Bluetooth* LED will flash blue light three times. Release the button and the *Bluetooth* LED will then flash blue and red lights alternately to indicate that the speaker is in *Bluetooth* pairing mode. Please see detailed pairing instructions on PAGE 5.

**Note:** If the pairing process cannot be completed within 90 seconds, the blue and red *Bluetooth* LED will stop flashing and the *Bluetooth* pairing process will automatically terminate. Please repeat the pairing instructions to pair up the *Bluetooth* speaker with the *Bluetooth* enabled device.

- b) **ANSWERING / ENDING CALLS:** To answer press the button to pick up the call. Press again to end the call.

- c) **PLAY / PAUSE:** Press "▶/⏸" button to play the selection, press again to pause.

**⏮**: Press to decrease the volume.

**⏭**: Press to increase the volume.

**📞**: The Built-in Microphone is located on the bottom of the system.

**Note:** Make sure your *Bluetooth* enabled device is connected with the *Bluetooth* speaker. When the phone ring on your *Bluetooth* enabled phone, you can answer directly from your phone or press the "▶/⏸" button to answer the call. You will be able to talk hands-free through the microphone.