




Emerson Dresser Assembly Instructions

- Please read all instructions before beginning assembly.
- For your safety and convenience, assembly by two people is recommended.
- Use the parts and hardware lists to identify and separate each of the components included.
- Save all packing materials until assembly is complete to avoid the accidental discarding of smaller parts or hardware.
- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Keep instructions for future used.

Assembly Instructions:

1. The wooden adjustable shelf was attached to the shelf supports (shelf pins) for shipping. To change the position of the shelf, first remove the screws from the shelf supports. Remove the shelf and relocate the shelf supports to another set of pre-bored holes. Re-install the shelf. **Fig.1.**

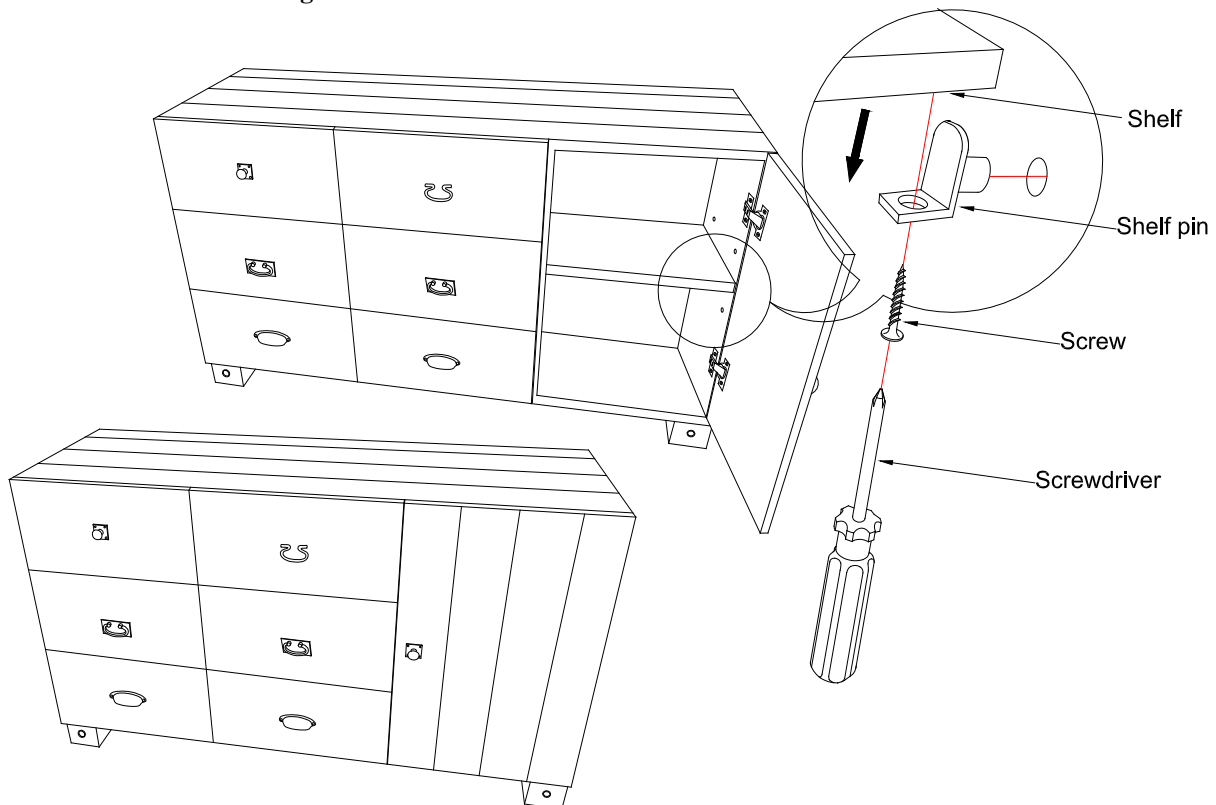

2. Assembly is complete.

Adjusting Levelers:

Due to an uneven floor the furniture may not sit level due causing it to wobbles. If the piece wobbles, determine which corner does not touch the ground correctly. With two people follow these steps:

1. Carefully lift the item slightly to provide access to the levelers attached to the bottom.
2. Turn the levelers until adequate contact will be made with the floor. Gently set down the piece and check stability.
3. Repeat steps until furniture sits firmly on the ground.

Care Instructions:

- Dust with a clean, soft damp cloth and wipe dry immediately.
- Avoid the use of chemicals and harsh cleaning agents

Thank you for your purchase.
stores | catalog | www.pbteen.com