



PB
teen

iBeanbag Chair

CAUTION: Adult supervision and assembly required. Adults should take care when unpacking and setting up electrical components of this chair this item.

Read before use:

- Excessive use of audio equipment could lead to hearing loss. If you are using earphones, set your volume to a safe level. If you experience ringing in your ears, reduce the volume or discontinue use of your device.
- Children under the age of 7 should not use this product without adult supervision
- Strictly for indoor use – do not expose to direct sunlight, moisture or extreme temperatures
- If cover becomes wet, disconnect power supply and do not use until completely dry
- Never try to remove cover or any components to avoid injury or electrical shock.
- Only use the power adaptor that came with this chair. Adapters for other electronic devices may look similar but may damage this chair.
- The only way to shut off power completely to your power adaptor is to disconnect it from power source.
- Always leave space around your power adaptor. Do not use in a location where airflow around the power adaptor is confined.

Warning:


Electrical equipment may be hazardous is misused. Operation of this product, or similar products must always be supervised by an adult. Do not allow children access to the interior of any electrical product and do not permit them to handle any cables.

PRE-ASSEMBLY:


- Please read all instructions before beginning assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts

PARTS INCLUDED:

- (A) Chair - 1pc
- (B) AC/DC Power Supply - 1 pc
- (C) iPod Cable - 1 pc
- (D) RC Stereo to Mini Adaptor - 1 pc
- (E) AC/DC RCA female to female plug adaptor - 2 pcs

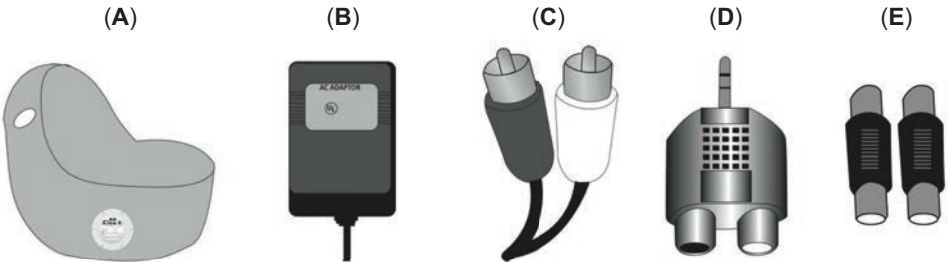

CONTROL PANEL:

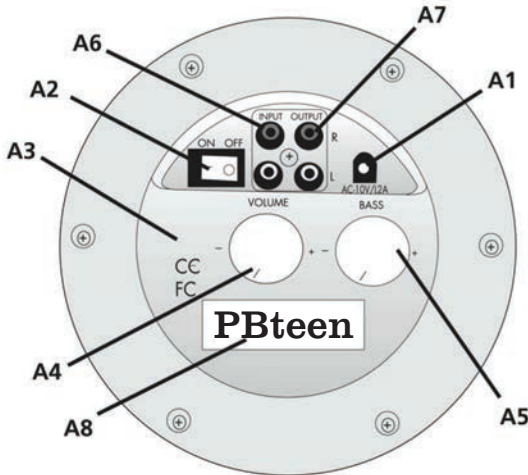 

A1- AC Power Input Jack
A2- Power On/Off Switch
A3- Headphone Plug In Jack
A4- Volume Adjust
A5- Bass Adjust
A6- iPod Cable
A7- Audio Output Jack for Multi-user
A8- Power "ON" Indicator Light

 
System Specifications:

Dimensions: 29" w x 34" h x 30" depth;
Seating dimensions: 28" w x 12.5" h x 20" depth
Weight: 18 lbs


- (2) 4.5" speakers @ 5W 8 Ohms
- (1) 4.5" speakers @ 10W 8 Ohms
- (1) 12v AC Power Adaptor

ASSEMBLY INSTRUCTIONS:


1. Plug the Power Adapter (B) into the power outlet and attach the other end into the AC Power Input Jack (A1).

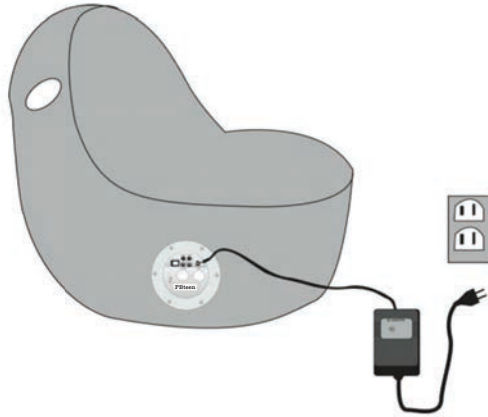

 2. Plug the white iPod Cable (C) into the headphone jack of your device, then plug the other end of iPod cable into the RCA Audio Input Jack of the chair (A7) on your control panel.

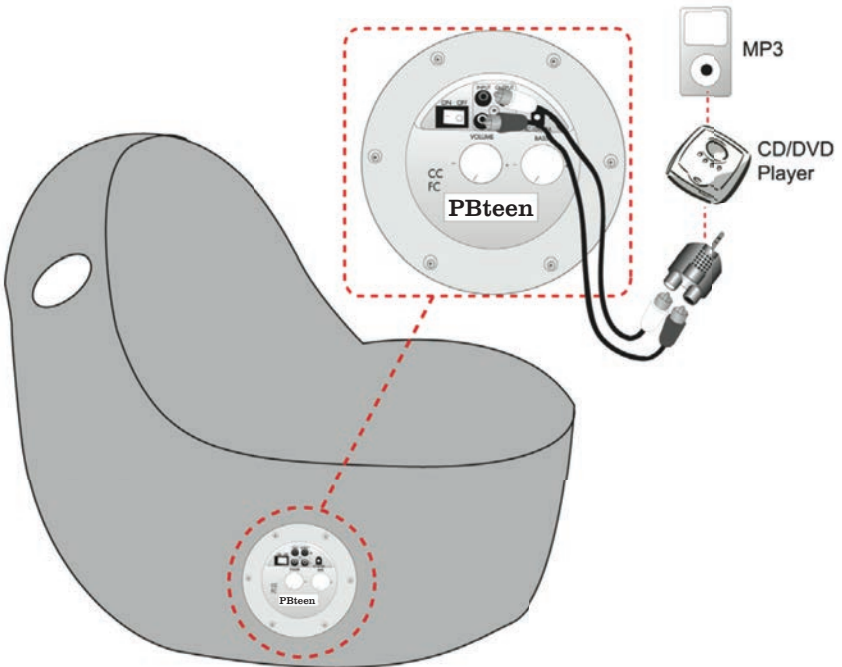

 3. Turn the power switch (A2) to on position, and raise or lower the volume or bass with the knobs located on the control panel (A4, A5).

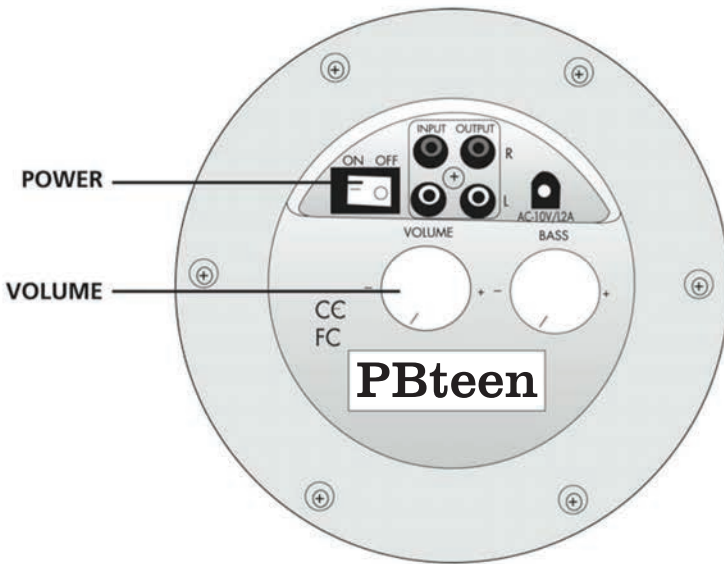

CARE INSTRUCTIONS:

- Spot clean only with a damp cloth