



EM Awning Stripe Drum Pendant Assembly and Installation Instructions

Country of Destination: US/CN UK/EU/AUS Middle East

CAUTION:

- **BEFORE INSTALLING FIXTURE, MAKE SURE THE POWER TO THE CIRCUIT IS TURNED OFF AT THE MAIN FUSE BOX / CIRCUIT BREAKER UTILITY BOX.**

Important Safety Instructions:

- These instructions are provided for your safety. It is very important that they are read carefully and completely **before** beginning the assembly and installation of this lighting fixture.
- We strongly recommend that a professional electrician install all direct wire fixtures.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with Ground wire or equivalent protection system).
- For your safety, it is strongly recommended that two people install the lighting fixture.
- This fixture has been rated for up to two (2) **60-watt maximum TYPE A standard incandescent light bulbs** (not included) or two (2) **13-watt compact fluorescent light bulbs** (not included). To avoid the risk of fire, do not exceed the recommended lamp wattage.
- **Use with approved PBteen Shades only, having a minimum opening diameter of 4-1/2 inches and a minimum lamp-to-shade spacing of 2-1/2 inches.**
- The lighting fixture is meant for indoor use, DRY LOCATIONS ONLY.
- **Save these instructions.**

WARNING:

- **To reduce the risk of fire, electrical shock or personal injury, always turn off the light fixture and allow it to cool prior to replacing the light bulb.**
- **Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.**
- **Keep flammable materials away from lit bulb.**
- **This lighting fixture contains lead, a chemical know to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.**

Pre-assembly:

 
 




- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- For your safety, it is strongly recommended that two people install the lighting fixture.

Parts Included:

- (1) Mounting Plate (D)
- (1) Threaded Tube (E)
- (1) Canopy (F)
- (1) Hanging Loop (G)
- (1) Canopy Nut (H)
- (1) Lock Washer (I)
- (1) Hex Nut (J)
- (2) Closable Link with Screw Caps (K/K1)
- (1) Chain (L)
- (1) Fixture Loop (M)
- (1) Shade (N)
- (1) Socket Assembly (O)
- (2) Sockets (P)
- (1) Diffuser (R)
- (1) Upper Tube (T)
- (1) Lower Tube (U)
- (1) Shade Bracket (V)

Hardware Enclosed:

- (3) Plastic Wire Nut Connectors (A)
- (1) Green Ground Screw (B)
- (2) Mounting Screws (C)
- (1) Flat Washer (Q)
- (1) Finial (S)

A  3x	B  1x	C  2x
I  1x	J  1x	S  1x

TOOLS REQUIRED (not included): Ladder, Phillips Head & Flat Blade Screwdrivers, Wire Cutter/Stripper, Pliers & Electrical Tape.

To Adjust the Suspension Length of the Fixture:

1. Note: The adjustment or shortening of the lighting fixture's suspension length is only needed if the factory set chain length is not appropriate for your installation. We recommend that you adjust the chain to the proper desired length before cutting the electrical cord.
2. Determine the lighting fixture suspension length from the ceiling for the product installation, allowing the extra cord length for the outlet junction box wire connections as noted below.
3. Pull out the fixtures 2 wire power cord and bare ground wire woven through the Chain (L).
4. The chain length may be shortened from either end, if desired, by using pliers to separate a link along a split-line formed in each link. Use two pairs of pliers to gently pry the link apart so that a space is created large enough for the link to be removed from the remaining chain. Use a cloth or folded piece of paper between the pliers and the link to protect the finish of the link during bending. For longer lengths of chain to be removed, select the desired link from either end to open and remove the length of chain. Once the chain is at the desired length, reattach the chain (if it isn't already) to the two Closable Links with Screw Caps (K) at each end of the chain. Secure each link by tightening the Closable Link Screw Cap (K1) (See Fig. 2). One Closable Link with Screw Cap (K) must be attached to both the Chain (L) and Fixture Loop (M) at the top of the Pendants Body and the other Closable Link with Screw Cap (K) must be securely attached to the other end of the Chain (L) and Hanging Loop (G).
5. Re-weave the fixtures 2 wire power cord and bare ground wire through every other loop to the top of Chain (L).
6. If needed, (depending upon final fixture hanging position from the ceiling), cut off the extra power cord length on the 2 wire cord and bare ground wire. Make sure when cutting the power cord and bare ground wire to cut them so that they all are at least 6 inches (152.4 mm) long within the outlet junction box (J-box). Prepare the cut power cord wires

using the following steps. Use wire strippers to prepare the ends of the two wires so that there is about 1/2 inch of exposed wire for the Plastic Wire Nut Connectors (A).

Assembly & Installation Instructions:

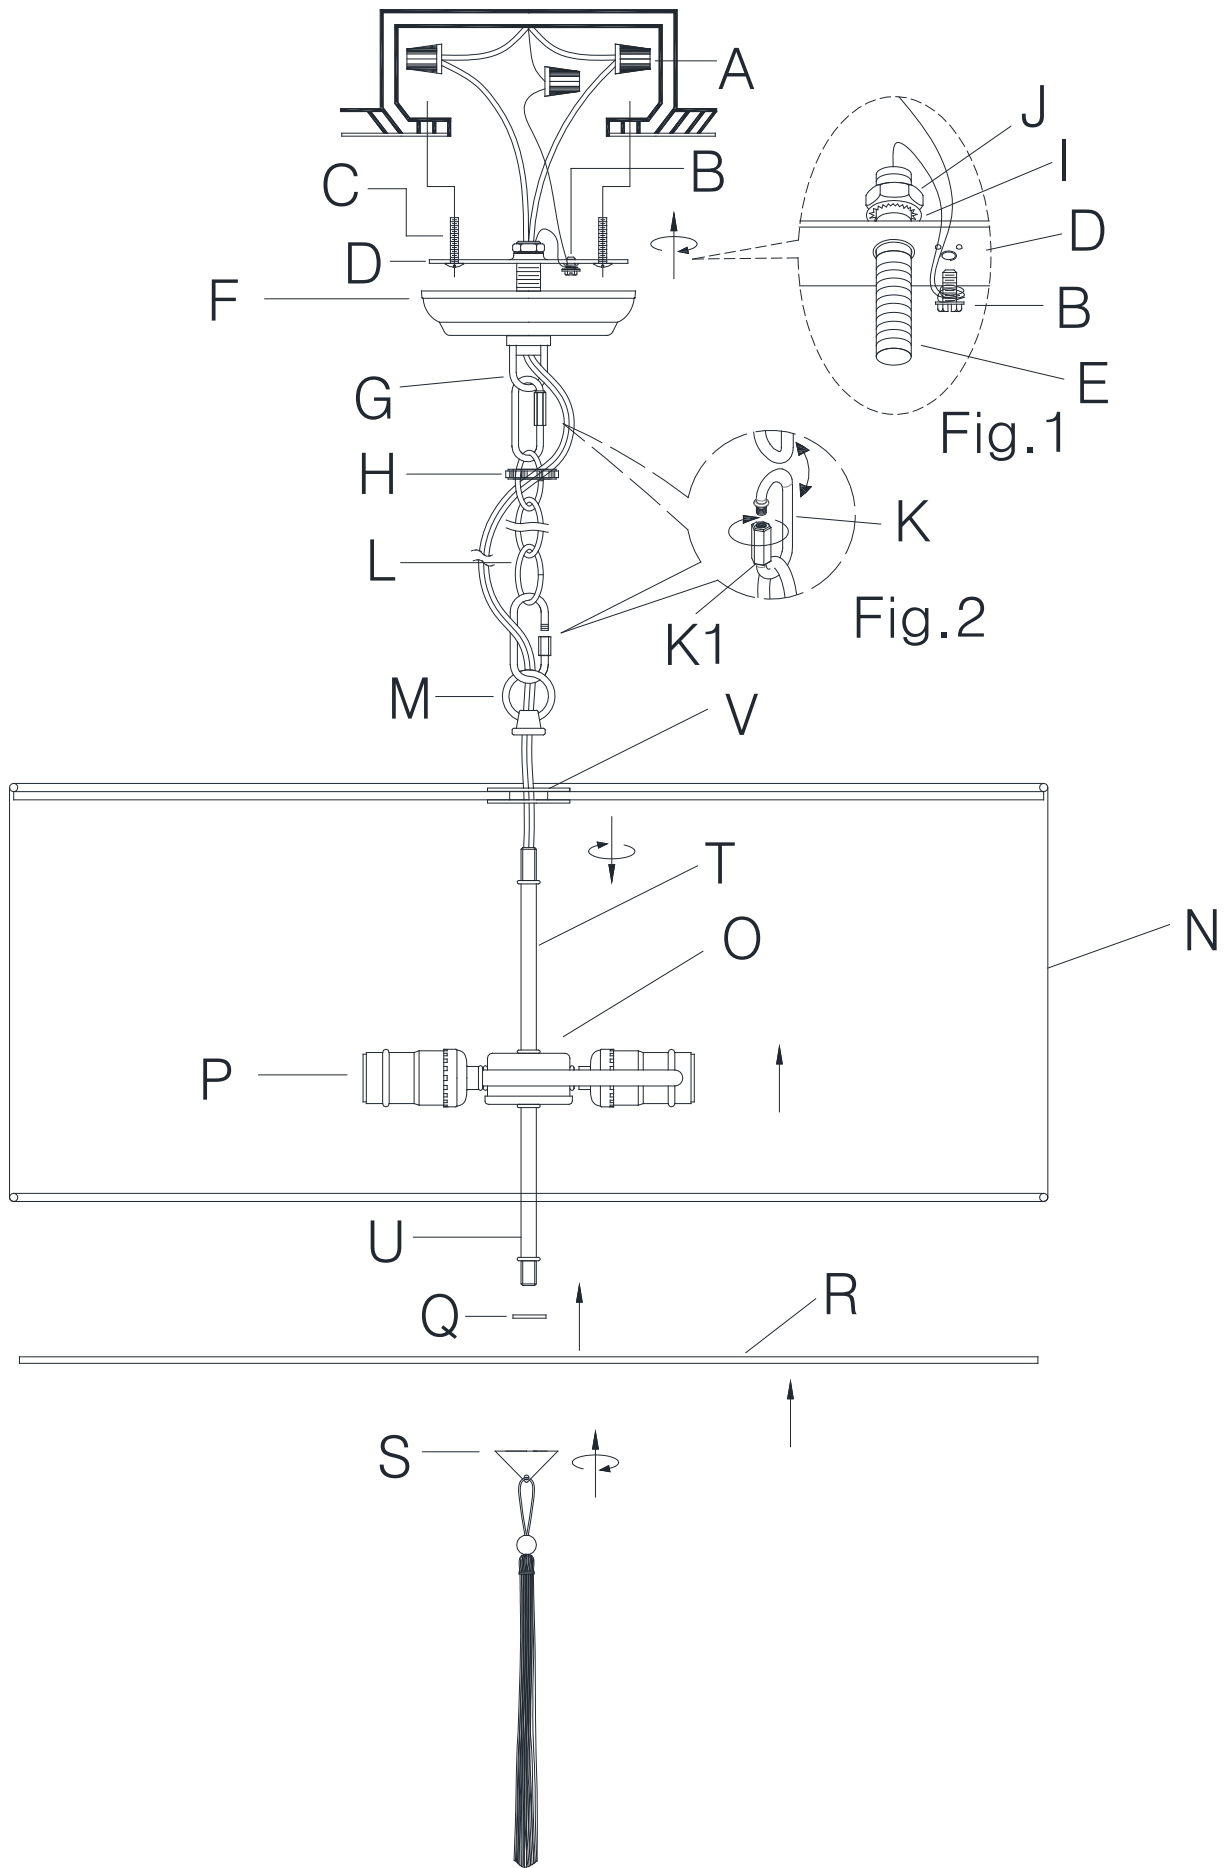
1. **SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!**
2. Carefully unpack all fixture parts and hardware and lay them out on a clear workspace.
3. Insert the fixtures wires through the center hole of the Shade Bracket (V) on Shade (N) first and then wiring hole of the Fixture Loop (M). Position the Shade (N) over the Socket Assembly (O) making sure the top end of the Upper Tube (T) extend through the center hole of Shade Bracket (V), secure the Shade (N) by turning the Fixture Loop (M) in a clockwise direction by hand until tight. (See diagram).
4. Unscrew the Closable Link Screw Cap (K1) from the lower Closable Link (K), and insert the bottom loop of Chain (L) and Fixture Loop (M) into the Closable Link (K). Tighten the Closable Link Screw Cap (K1) as shown in Fig. 2.
5. If needed, weave the fixtures 2 wire power cord and bare ground wire through every other loop to the top of Chain (L).
6. Slip Canopy Nut (H) first and then position Canopy (F) over the upper end of Chain (L).
7. Unscrew the Closable Link Screw Cap (K1) from the upper Closable Link (K), and insert the top loop of Chain (L) and Hanging Loop (G) into the Closable Link (K). Tighten the Closable Link Screw Cap (K1) as shown in Fig. 2.
8. If the parts are not already preassembled, attach the Threaded Tube (E) into the threaded bore of the Hanging Loop (G) and rotate the Threaded Tube (E) clockwise until it is tightly engaged within the Hanging Loop (G). If the Threaded Tube (E) is not yet secured to the Mounting Plate (D), do so now so that a portion of the Threaded Tube (E) extends beyond the Mounting Plate (D).
9. Position the Lock Washer (I) first and then the Hex Nut (J) onto the extended upper portion of the Threaded Tube (E). Make sure the length of the Threaded Tube (E) is longer on the bottom end, as shown in Fig. 1. Tighten the Hex Nut (J) until tight using a hex wrench or a pair of pliers so that the Hanging Loop (G) is now firmly secured to the middle of the Mounting Plate (D).
10. Feed the fixtures 2 wire power cord and bare ground wire through to the Hanging Loop (G) and the Threaded Tube (E).
11. If needed, (depending upon final fixture hanging position from the ceiling), cut off the extra power cord length on the 2 wire cord and bare ground wire. Make sure when cutting the power cord and bare ground wire to cut them so that they all are at least 6 inches (152.4 mm) long within the outlet junction box (J-box). Prepare the cut power cord wires using the following steps. Use wire strippers to prepare the ends of the two wires so that there is about 1/2 inch of exposed wire for the Plastic Wire Nut Connectors (A).
12. Gently pull existing wire down from the ceiling junction box and allow wires to hang. The HOT or LIVE wire is usually black. The NEUTRAL wire is usually white. Check to see if there is a ground wire that is usually green or green with a yellow stripe or exposed copper metal wire. If needed, use a pair of wire strippers to remove about 1/2 inches of insulation from each wire.
13. Carefully inspect the fixtures wires. The NEUTRAL FIXTURE WIRE has FINE LONGITUDINAL RIDGES running along its length. The HOT FIXTURE WIRE is has a SMOOTH covering and the BARE COPPER WIRE is the GROUND WIRE. If you have any doubt and cannot identify the power-supply wires with confidence, then we recommend that you ask an electrician and that you not continue with the installation.
14. With the help of another person to hold the weight of the fixture, attach the GROUND WIRE from the fixture to the GROUND JUNCTION BOX WIRE from the ceiling outlet junction box (J-box) (usually green insulation or bare wire). Fasten each together with a Plastic Wire Nut Connector (A) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed. If your outlet junction box DOES NOT

have a GROUND WIRE, be sure to insert the Green Ground Screw (B) into the Mounting plate (D) marked as "GND", facing downward and wrap the fixture's bare ground wire around the Green Ground Screw (B). Tighten screw to clamp ground wire between ground screw head and Mounting plate (D). **IT IS IMPERATIVE THAT THE JUNCTION BOX IN YOUR HOME BE PROPERLY GROUNDED!**

15. Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL JUNCTION BOX WIRE (usually white insulation). Fasten each together with a Plastic Wire Nut Connector (A) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed.
16. Connect the HOT FIXTURE WIRE to the HOT JUNCTION BOX WIRE (usually black insulation). Fasten each together with a Plastic Wire Nut Connector (A) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
17. Check the wiring connections and if all looks good, gently tuck the wire connections neatly into the ceiling junction box.
18. With the help of another person to hold the weight of the pendant, attach the Mounting plate (D) to the ceiling outlet box using the 2 J-box Mounting Screws (C). Align the slots of the Mounting plate (D) with the two threaded holes located on the J-Box. Use a screwdriver to tighten each screw with a screwdriver until the Mounting plate (D) is firmly secured to the J-Box. The pendant can now be supported by the J-box.
19. Slide the Canopy (F) upward along the Chain (L) so that the central opening of the Canopy (F) is received by the threaded portion of the Hanging Loop (G). A section of the threads on Hanging Loop (G) should be exposed below the Canopy (F). The Hanging Loop (G) should be hanging below the Canopy (F) and the upper rim of the Canopy (F) should be pressing gently against the ceiling surface, covering the junction box. While holding the Canopy (F) firmly in place, position the Canopy Nut (H) against the Hanging Loop (G) and rotate the nut clockwise to engage it with the threaded portion of the Hanging Loop (G) until secure. Do not over tighten this nut. Finger tight should be sufficient to hold the Canopy (F) firmly in place.
20. Insert two (2) **60-watt maximum TYPE A standard incandescent light bulbs** (not included) or two (2) **13-watt compact fluorescent light bulbs** (not included) into the Sockets (P). **DO NOT EXCEED THE SPECIFIED WATTAGE.**
21. Attach the Flat Washer (Q) onto the bottom end of the Lower Tube (U) first and then the Diffuser (R) making sure the bottom end of the Lower Tube (U) extend through the center hole of the Diffuser (R). Secure the Diffuser (R) in place by turning the Finial (S) onto the extended threaded portion of Lower Tube (U) in a clockwise direction by hand until tight.(See diagram)
22. Restore power to junction box and test fixture.
23. Assembly and Installation is complete.

Care instructions:

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.



Thank you for your purchase
 Stores | catalog | www.pbteen.com
 USA 1.866.472.4001