



Shine On Task Clip Lamp

Assembly Instructions:

1. Insert a bulb - MAX (TYPE G) STANDARD 40 WATT (Excluding) into the Socket
2. Plug into the proper electrical outlet and test fixture.

WARNING:

- To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and unplug, allowing it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Caution:

This lamp uses a TYPE G 40W bulb (Excluding). Do not exceed recommended wattage of 60W maximum.

Care Instructions:

Wipe clean using a soft, dry cloth or static duster.

Always avoid the use of all chemicals and abrasive cleaners as they may damage the lamp's finish.

