


Rise and Shine Alarm Clock

Thank you for your purchase of this quality LCD Alarm Clock with LED backlight. Please read the instruction carefully and keep it in a safe place for future use.

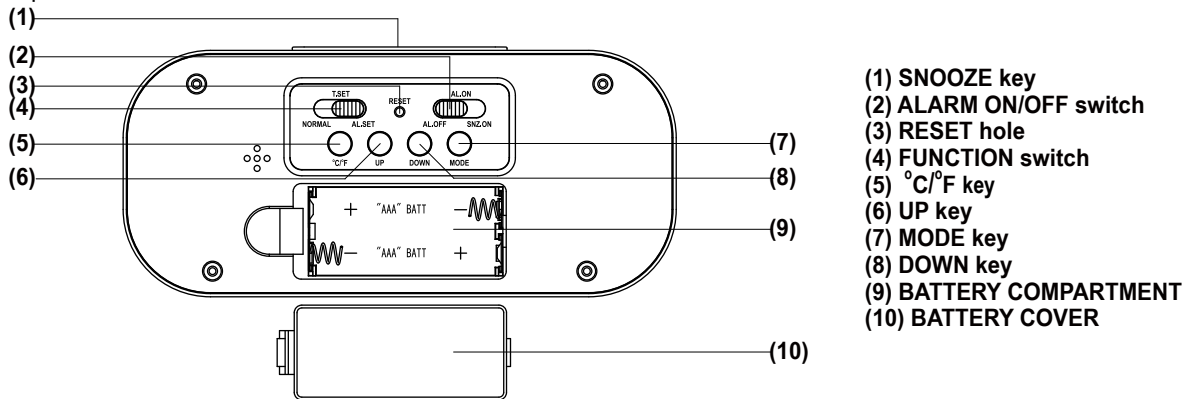

At first, open the **BATTERY COVER (10)** and insert 2 x 'AAA' size batteries into the **BATTERY COMPARTMENT (9)** as the polarity indicated, then close the **BATTERY COVER (10)**.

Note: Do not mix new and old batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries.

FUNCTIONS

- Time and Calendar (including display of Month, Date and Day of the Week)
- Normal Alarm & Snooze Alarm
- Temperature (in selectable °C/°F format)

TIME AND CALENDAR SET

- Move the **FUNCTION switch (4)** to T.SET (TIME SET), hour part is blinking; press **UP (6)** or **DOWN key (8)** to set the hour. (Be careful to set AM or PM correctly. When the PM time is set under 12-hour mode, a 'PM' mark will be on display.)
- Press **MODE key (7)**, minute part is blinking; press **UP (6)** or **DOWN key (8)** to set the minute.
- Press **MODE key (7)**, year part is blinking; press **UP (6)** or **DOWN key (8)** to set the year (from 2002-2099).
- Press **MODE key (7)**, month part is blinking; press **UP (6)** or **DOWN key (8)** to set the month.
- Press **MODE key (7)**, date part is blinking; press **UP (6)** or **DOWN key (8)** to set the date.
- Move the **FUNCTION switch (4)** to NORMAL, the time and calendar settings are finished.

ALARM SET

- Move the **FUNCTION switch (4)** to AL.SET (ALARM SET), hour part is blinking; press **UP (6)** or **DOWN key (8)** to set the alarm hour. (Be careful to set AM or PM correctly.)
- Press **MODE key (7)**, minute part is blinking; press **UP (6)** or **DOWN key (8)** to set the alarm minute.
- Press **MODE key (7)** again, the snooze interval minute is blinking; here you can set snooze interval from 1 to 60 minutes by pressing **UP (6)** or **DOWN key (8)**. You can ignore this step; the default snooze interval is 1 minute.
- Move the **FUNCTION switch (4)** to NORMAL, the alarm setting is finished.

TURN THE NORMAL ALARM OR SNOOZE ALARM ON/OFF

- Normal Alarm:
Move the **ALARM ON/OFF switch (2)** to AL.ON (ALARM ON), the clock will alarm lasting 1 minute only once when the set alarm time is up. (Press any key to stop alarm sound.)
- Snooze Alarm:
Move the **ALARM ON/OFF switch (2)** to SNZ.ON (SNOOZE ON), the alarm sound will start when the set alarm time is up;
 - Press **SNOOZE key (1)**, the clock will stop alarm temporarily; the alarm sound will start again after the snooze interval ends. After doing so three times repeatedly, the snooze alarm function will stop working.
 - If no button is pressed manually the alarm will last for 1 minute per every snooze interval (three times in total). After that, the snooze alarm function stops working.
 - Press any key except of **SNOOZE key (1)**, the snooze alarm function will stop working.
- Alarm off:
Move the **ALARM ON/OFF switch (2)** to AL.OFF, the normal alarm or snooze alarm function will stop working.

TEMPERATURE DISPLAY

- Under normal state, press **°C/°F key (5)** to select Celsius or Fahrenheit on temperature display.

12/24 HOUR MODE

- Under normal state, press **DOWN key (8)** to select 12/24 hour mode.

RESET

- If the clock is dead (the display doesn't work) during setting, please use a slim but blunt object (like ball pen pointer, toothpick etc.) to press **RESET hole (3)**, then the clock will return to the initial mode.

BACKLIGHT

- Press **SNOOZE key (1)** on the top of the clock at any time, the backlight will be lightened.

MAINTENANCE

- The batteries should be replaced if the display screen or alarm becomes dysfunctional or weak.
- Please use a soft cloth or a paper towel to clean the clock.
- Do not use any corrosive cleanser or chemical solutions on the clock.

Thank you for your purchase!