




**BEADBOARD BASIC BED
FULL/TWIN**

ASSEMBLY INSTRUCTIONS

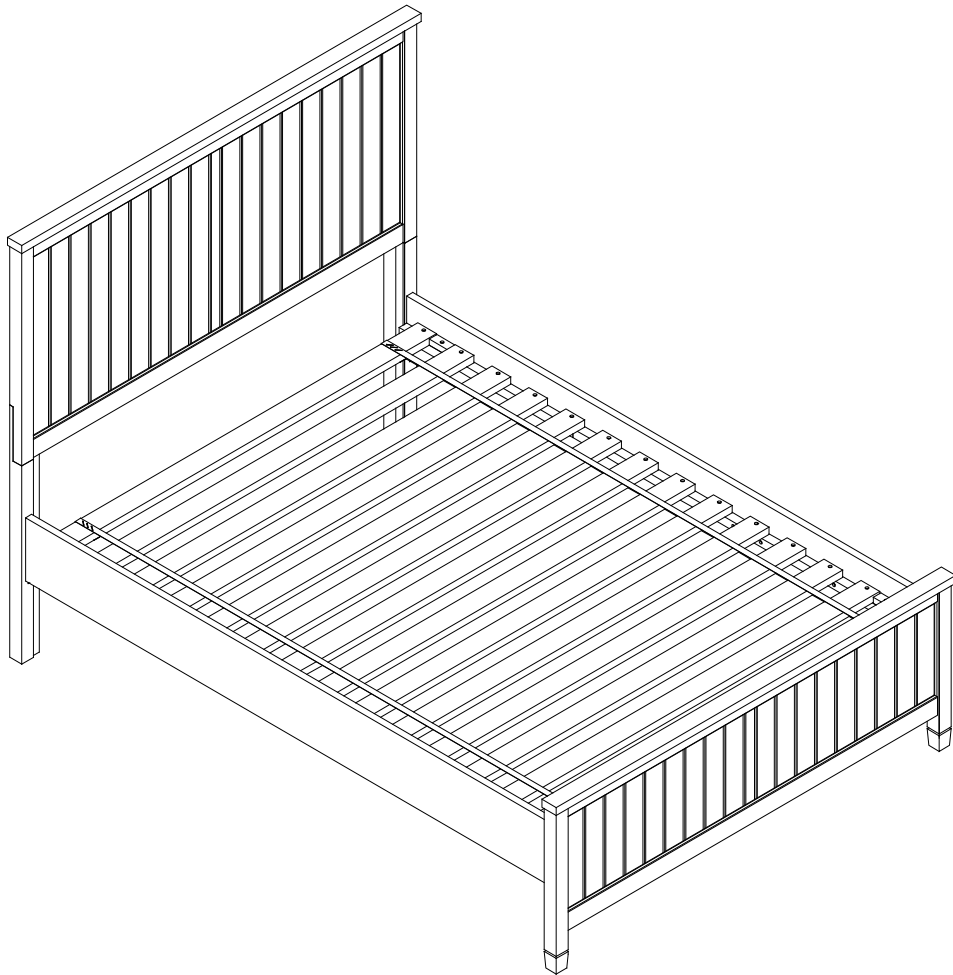







Important Safety Instructions:

- Please read all instructions carefully before assembling this bed.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep these instructions for future use.
- Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.






Pre-assembly:

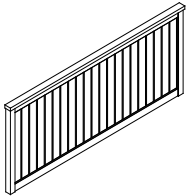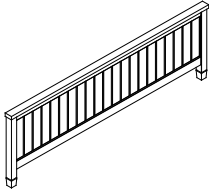- Remove all parts and hardware from the box. Place them on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- To avoid accidentally discarding small parts or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.
- Use the parts and hardware lists below to identify, and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage the hardware and split the wood.

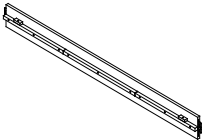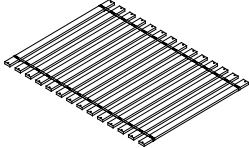
Parts Included:

 <p>(A) Headboard – 1x</p>	 <p>(B) Footboard – 1x</p>	 <p>(C) Left Headboard Leg – 1x</p>
 <p>(D) Right Headboard Leg – 1x</p>	 <p>(E) Side Rail – 2x</p>	 <p>(F) Slat Roll – 1x</p>

Hardware Included:




 <p>(G) Allen Key – 1x</p>	 <p>(H) Bolt 5/16"x 35mm – 4x</p>	 <p>(I) Spring Washer 5/16" – 4x</p>
 <p>(J) Flat Washer 5/16" – 4x</p>	 <p>(K) Wood Screw 4x30mm – 28x</p>	


Tools Required:

Philips Head Screw Driver  (not included)

Assembly Instruction Steps:

1. Attach the Left and Right Headboard Legs (C&D) to the posts of Headboard (A), as seen in the illustration below.
2. Secure with 4 sets of Bolt (H), Spring Washer (I), and Flat Washer (J) through the pre-drilled holes found on the Right & Left Headboard Legs (C&D) and into the pre-fixed mounting plates of the Headboard (A) posts.
3. Tighten with Allen Key (G).


H		4x
I		4x
J		4x

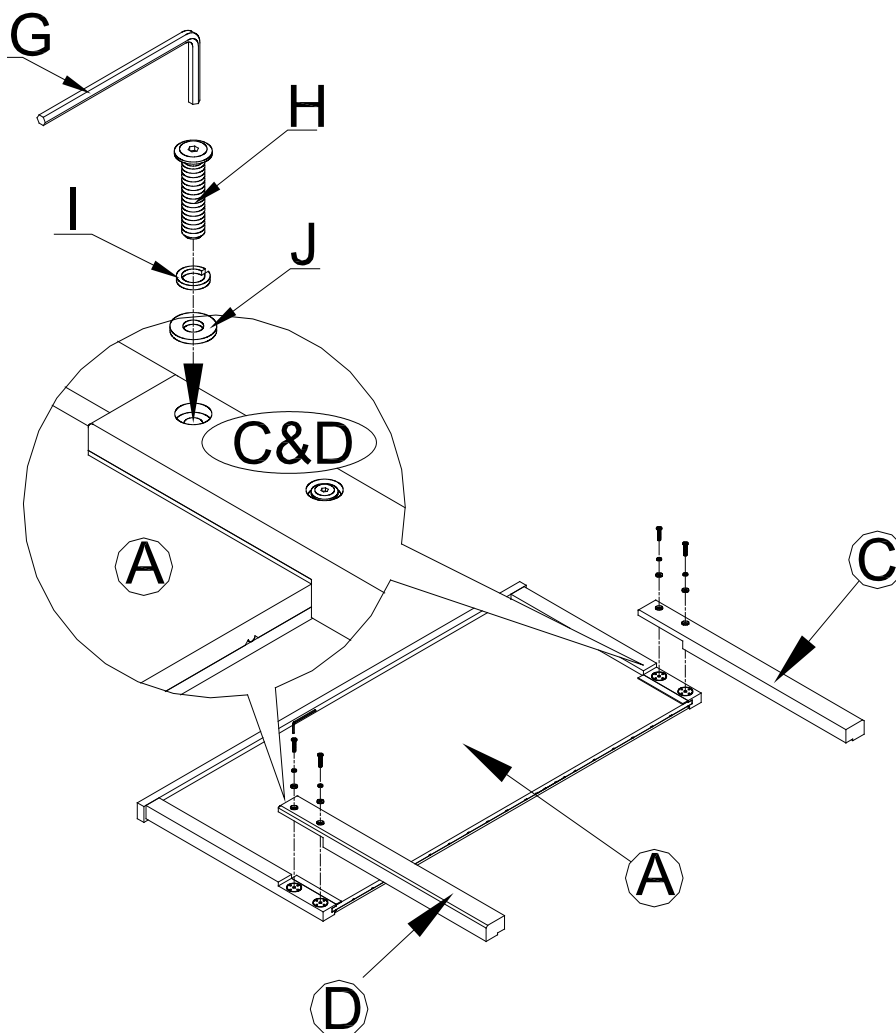


4. Determine the desired location of the bed and then hold the assembled Headboard (A) in a vertical position- tilted slightly forward.
5. Attach each Side Rail (E) to the Left & Right Headboard Legs (C& D) by inserting the hook (pre-attached at the ends of Side Rail) into the corresponding slots of the Left & Right Headboard Legs (C&D).
6. Push down firmly on the top of the Side Rails (E) until they sit themselves over the pins inside the leg slots, as shown in the illustration below. Be sure the small ledge on each Side Rail (E) is facing inward.

There are two levels for the Side Rails (E). If you plan to use a trundle, please use the higher setting.

7. Repeat steps #5 and #6 to assemble the Footboard (B), as seen in the illustration below.

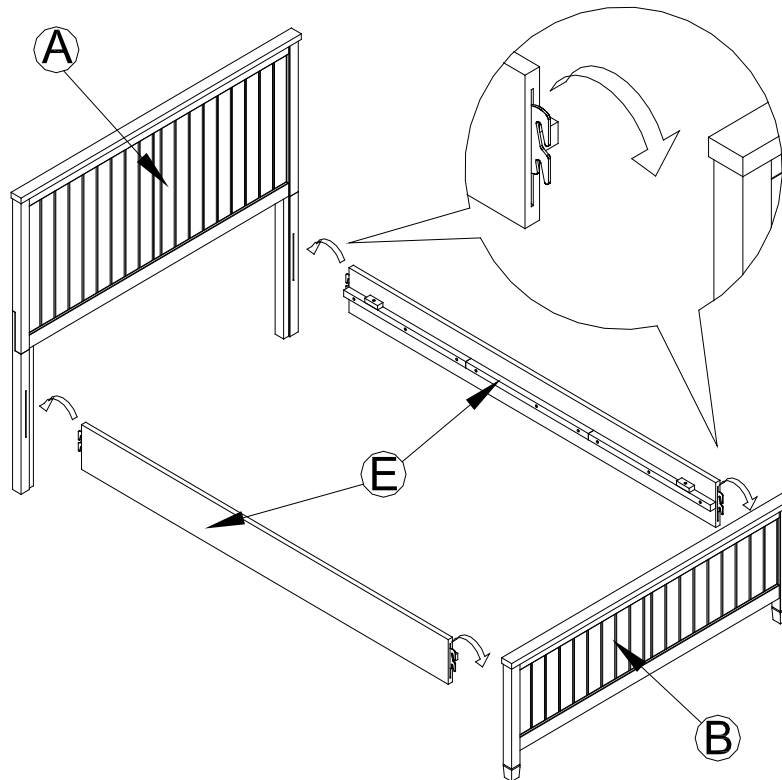

8. Lay the Slat Roll (F) on the bed.
9. Secure the Slat Roll (F) with 28 Wood Screws (K), using a Phillips Head Screwdriver (not provided).

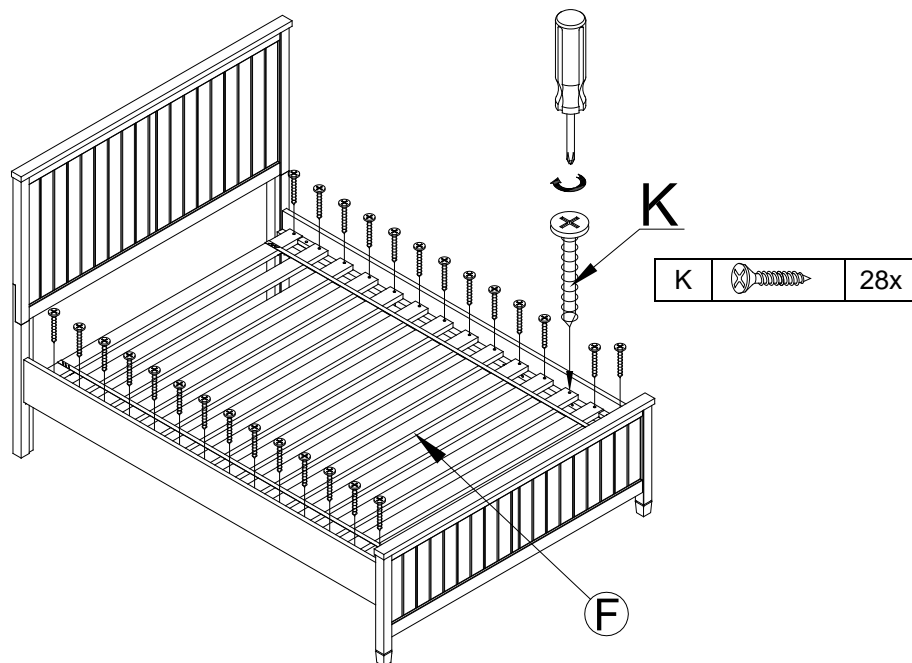

Care Instructions:

- Dust often using a clean, soft, dry, and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.