



## Surfboard Storage Mirror

Max Load: 4lbs each shelf

**Hardware Included:** (8) Machine Screws, (2) anchors, and (2) Wood Screws

**Parts Included:** (3) Shelves, (1) Mirror and (1) Allen Wrench

**Tools Required:** Phillips Head Screwdriver, Pencil and a Stud-Finder


### Assembly instructions:

This mirror was shipped unassembled and must be assembled before use. There are three shelves that must be secured to mounting cleats that are located on the back of the mirror. Owing to the shape of the surfboard, each shelf fits only one of the three mounting cleats. With the help of another person, lay the mirror face down on a protective surface. Position any of the three against the one cleat that matches (you may have to play around with this). You will know the shelf fits when the cleat snugly engages the recess formed along one edge of the particular shelf. Once engaged, hold the shelf steady and secure a machine thread screw into each hole. Tighten using the provided Allen wrench. It may be easier to wiggle the shelf up and down a slight bit during tightening.

The middle shelf includes two metal tie-down plates that are used to secure the item against a wall. Swing each plate down.

### Mounting Instructions:

1. Position the mirror shelf against a wall so that the rear edge of each shelf abuts the wall evenly and completely.
2. Use a pencil to mark the wall through each metal plate and then set the mirror aside.
3. Use a stud-finder to see if either mark aligns with a wall stud. If yes, then secure just a provided wood screw at this location when instructed to do so below.
4. For the marks that do not align with a wall stud, use a screwdriver to install an anchor into the wall. Place the tip of the anchor at the mark and use the screwdriver to both rotate the anchor (clockwise) and firmly push it into the wall. The anchor will drive itself into the wall like a screw. Continue rotating the anchor until its wide flange is flush with the wall surface. Do not over-tighten.
5. Return the mirror to the wall so that the two holes in the two tie-down plates align with either a stud-aligned mark or an installed screw. Use the screwdriver to secure a provided wood screw through the hole of each plate and into the anchor or wall. Rotate until tight.

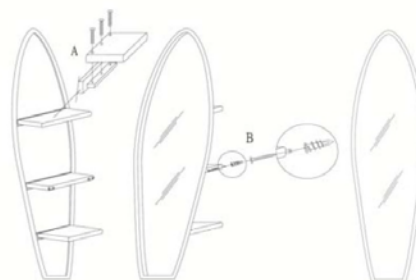

### Care Instructions:

Wipe with a soft, dry cloth. Do not use of any strong abrasive or solvent-based household cleaner.