




Chelsea Canopy Bed-Queen

PRE-ASSEMBLY:


- Please read all instructions before starting to assemble.
- Two adults are recommended during assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Do not use a power drill as it may cause cracking

PARTS INCLUDED:


A- Headboard (1pc)

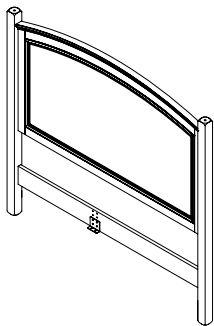


B- Footboard (1pc)

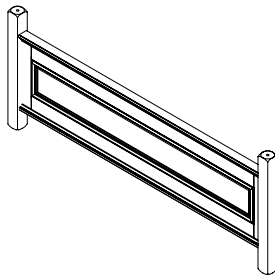


C- Slat Roll (1pc)

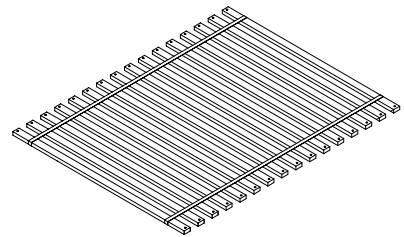


D- Side Rail (2pcs)

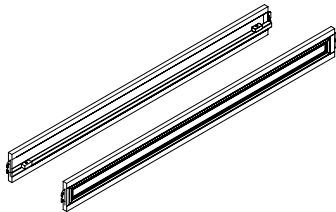


E- Footboard Long Post (2pcs)

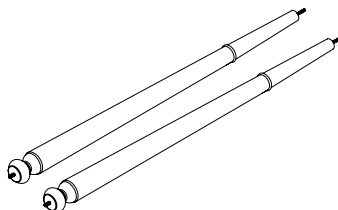


F- Headboard Short Post (2pcs)

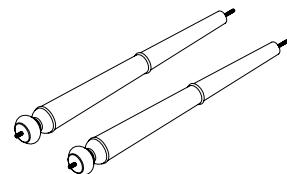


G- Long Top Side Rail (2pcs)

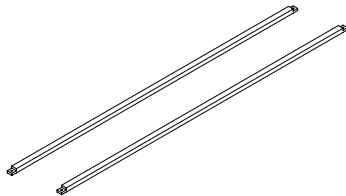


H- Short Top Side Rail (2pcs)

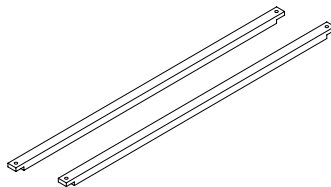


I- Center Support Rail (1pc)

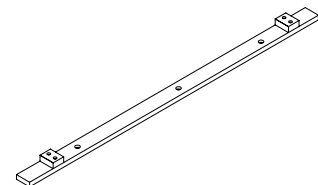


J- Center Leg (3pcs)

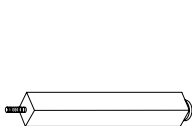

K- Round Finial (4pcs)

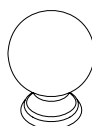

L- Leg (4pcs)

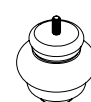

HARDWARE INCLUDED:

M- Long Wood Screw 32mm (28pcs) 

N- Short Wood Screw 16mm (4pcs) 


TOOLS REQUIRED (but not include):

- Philips Head Screwdriver

ASSEMBLY INSTRUCTION:


1. On a soft, scratch-free surface, such as a carpet or rug, remove all the parts from boxes. Insert the exposed screw of the Legs (L) into the pre-drilled holes on the bottom posts of the Headboard (A) and Footboard (B); turn clockwise until tight as shown below in Figure 1.1.
2. Hold the Headboard (A) in a vertical position tilted slightly forward. Attach each Side Rail (D) to the Headboard (A) by inserting the hooked ends of the Side Rail (D) into the corresponding slots in the Headboard (A) as shown below in Figure 1.2. Push down firmly on the top of the Side Rail (D) until they seat themselves securely into the Headboard (A). Repeat with Footboard (B). Please Note: There are two possible heights for the Side Rails (D); make sure the Side Rails (D) are on the same level for both the Headboard (A) and Footboard (B)
3. Insert the exposed screw of the Center Legs (J) into the pre-drilled holes on the bottom of Center Support Rail (I) as shown below in Figure 1.3
4. Place the Center Support Rail (I) onto the metal bracket located on Headboard (A) and Footboard (B). Please Note: If you placed the Side Rail (D) in the highest level on the Headboard (A) and Footboard (B), unscrew the metal bracket on the Headboard (A) and Footboard (B) and then re-attach to the upper pre-drilled holes.
5. Fasten Center Support Rail (I) into place by screwing the Short Wood Screw (N) through the pre-drilled holes on the Center Support Rail (I) and into the metal bracket on Headboard (A) and Footboard (B) as shown below in Figure 1.4. Adjust the recessed levelers located at the bottom of each Center Leg (J) by turning the levelers counter clockwise until adequate contact is made with the floor.

Figure 1

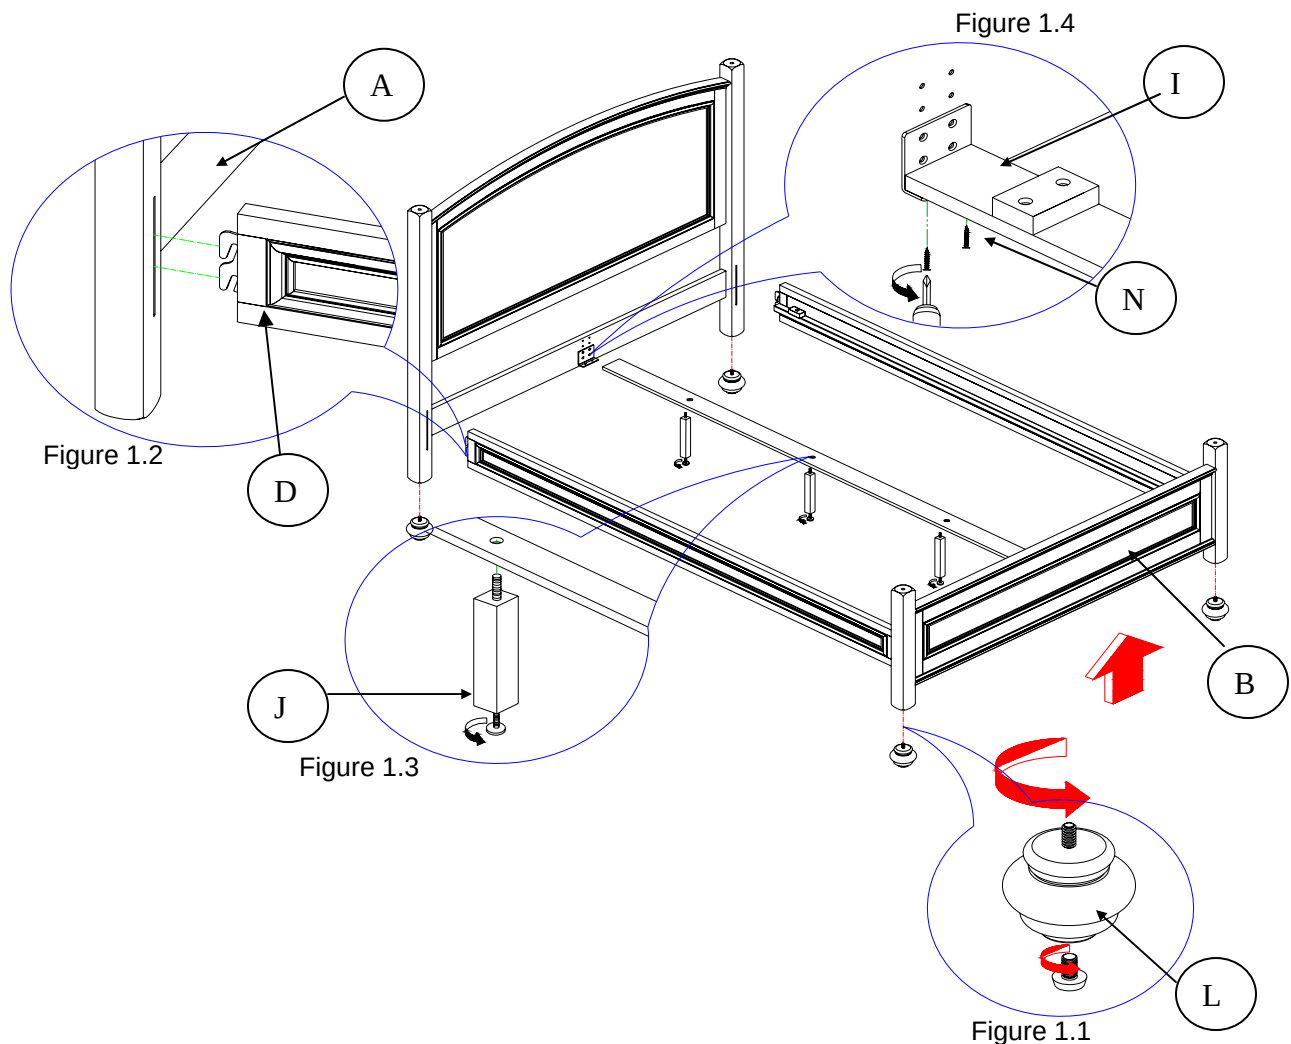


6. Lay Slat Roll (C) on the inner edges of the Side Rails (D); insert Long Wood Screw (M) into the pre-drilled holes on the Slat Roll (C) and into the Side Rails (D). Tighten using a Phillips Head Screwdriver as shown below in Figure 2.1.

Figure 2

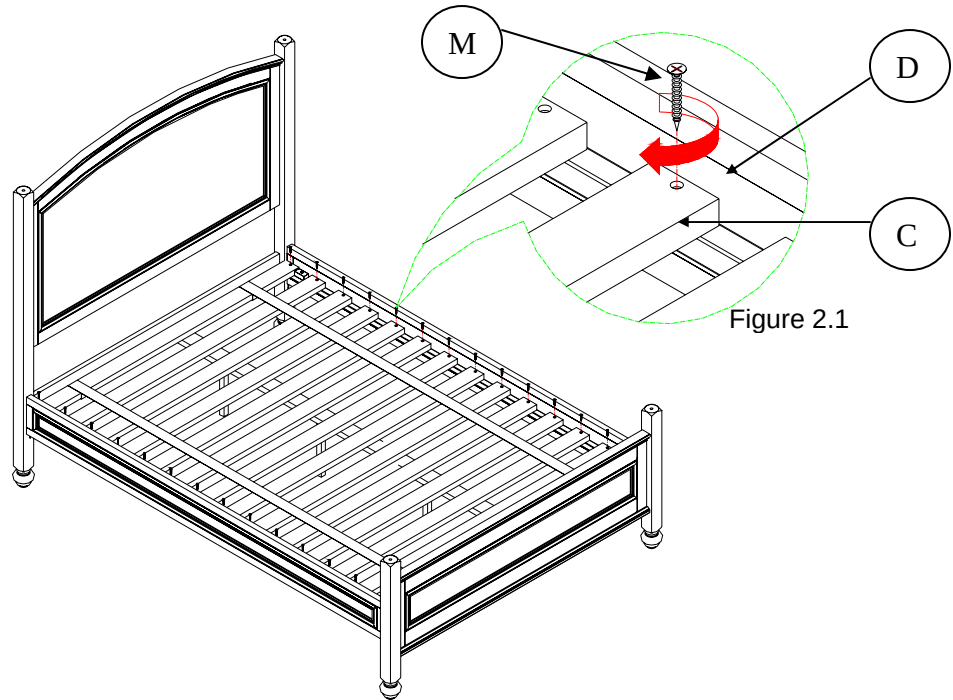


7. To use the bed with the Post only, place the Round Finials (K) on the Footboard Long Posts (E) and Headboard Short Posts (F) by turning clockwise to tighten. Place the Footboard Long Posts (E) on Footboard (B) and Headboard Short Post (F) on Headboard (A), tighten by turning clockwise as shown below.

Figure 3

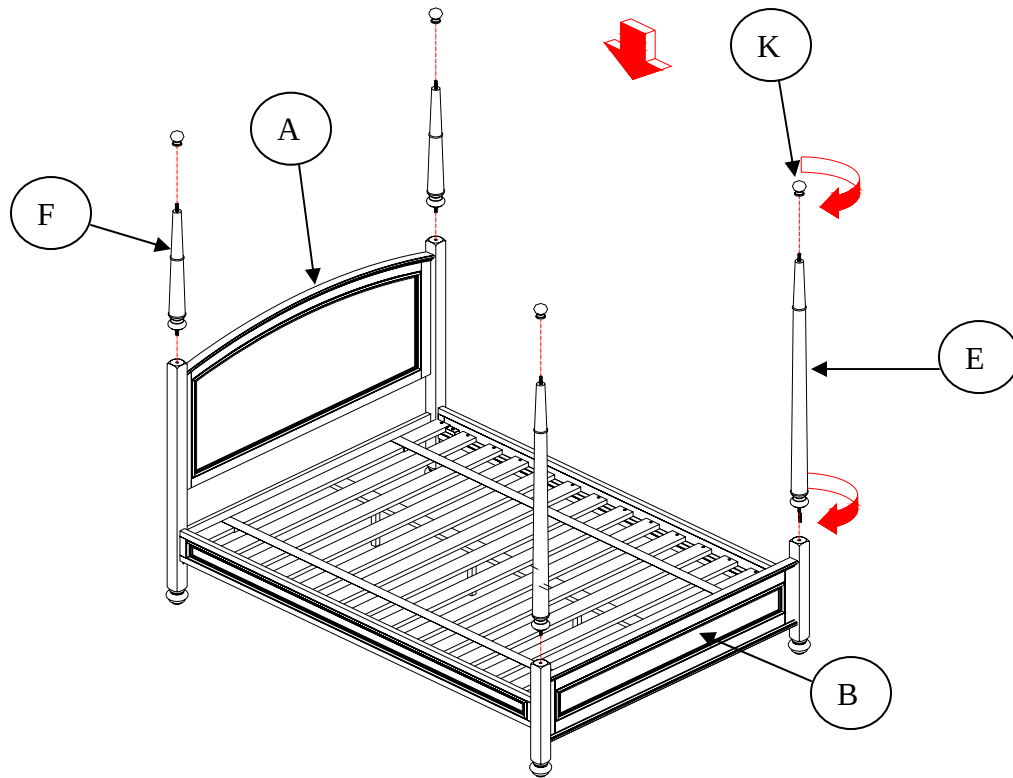

8. To use the bed with the Canopy place the Footboard Long Posts (E) on Footboard (B) and Headboard Short Post (F) on Headboard (A), tighten by turning clockwise as shown below. Lay the Long Top Side Rail (G) between Headboard Short Post (F) and the Footboard Long Post (E) and repeat on the other side. Then place the Short Top Rail (H) between the two Headboard Short Posts (F) and repeat for the Footboard Long Posts (E). Place Round Finials (K) on each post and tighten by turn clock-wise as shown below.

Figure 4

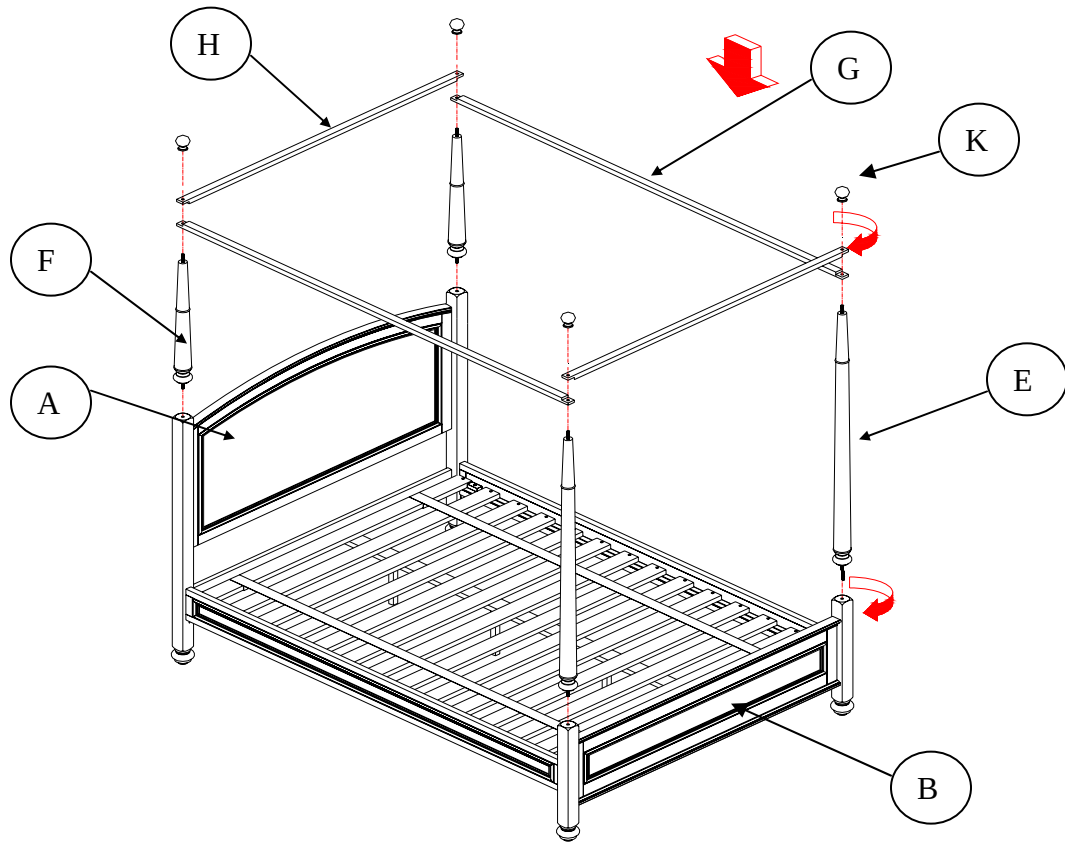

CARE INSTRUCTIONS:

- Avoid direct sunlight and excessive temperatures.
- Dust often using a clean, soft, dry and lint-free cloth.
- Waxing is not recommended on lacquered finish.