

UNIVERSAL STORAGE QUEEN BED

Date: 13-Nov-15


Important Safety Instructions:

- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:

- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.

• The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

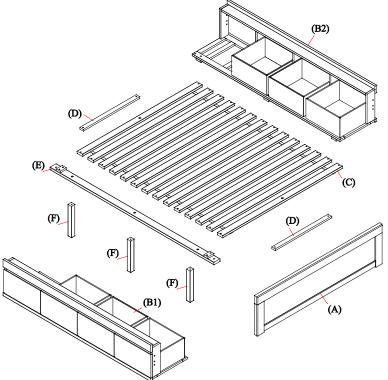

PARTS INCLUDED:

- (A) Footboard 1x
- (B1) Side rail 1x
- (B2) Side rail 1x
- (C) Slat 1 set
- (D) Support side rails 2x
- (E) Support slat 1x
- (F) Support legs 3x

HARDWARE INCLUDED:

(G) Wood Screw	(H) Flat Washer	(I) Look Washer	(J) Allen Blot	(K) Allen Key
28x	16x	16x	16x	1x
(L) Allen Blot	(M) Look Washer	(N) Flat Washer		
2x	2x	2x	TOOL REQUIRED (not included):	
			Phillips Head Sc	rewdriver
				<u> </u>

Date: 13-Nov-15 www. pbteen.com Page 2 of 6

Assembly Instruction Steps:


This simple base can assembly with different Camden HBs that includes Circulo or Floral Cut Out Headboard Buy the desired one for your home use.

Note: Use the instruction packed with the headboard to assembly it first


ASSEMBLY INSTRUCTION STEPS:

1. Remove the drawers from the storages.

Note: It may take considerable effort to pull out the drawer because there is a stopper at the bottom of the drawer. Make sure to pull the drawer straight out, as shown below.

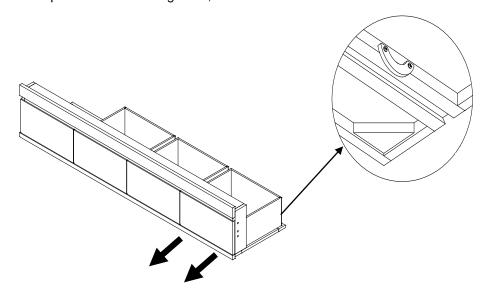


2. Attach Siderail (B2) with Footboard (A) by Flat Washer (F), Lock Washer (G), and Allen Bolt (H). Tighten with the Allen Key (I).

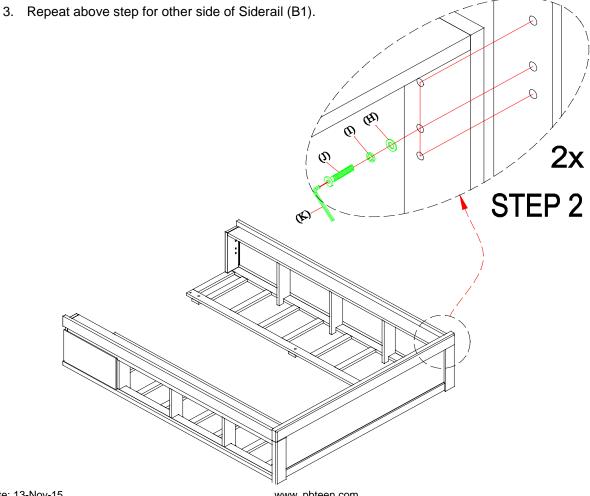


Date: 13-Nov-15 www. pbteen.com Page 3 of 6

- 4. Attach Side rail (B1) with the desired headboard (sold separately) by using Flat Washer (H), Lock Washer (I), and Allen Bolt (J). Tighten with the Allen Key (K).
- 5. Repeat above step for Side rail (B2) to headboard, as seen in the illustration below.

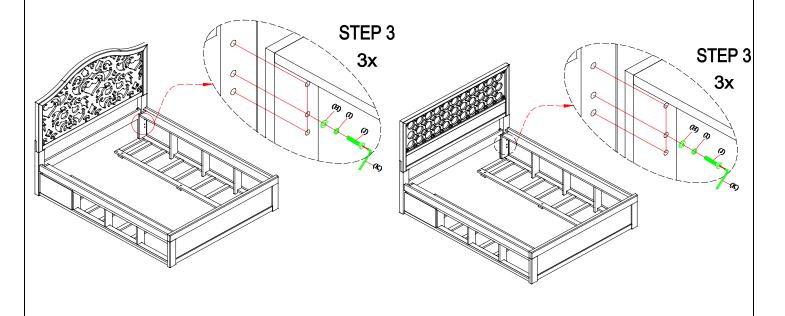


- 6. Attach a Support side rails (D) to the Side rail (B1) by using Flat Washer (H), Lock Washer (I), and Allen Bolt (J). Tighten with the Allen Key (K), as seen in the illustration below.
- 7. Repeat above step for Support side rail (D) to Side rail (B2).

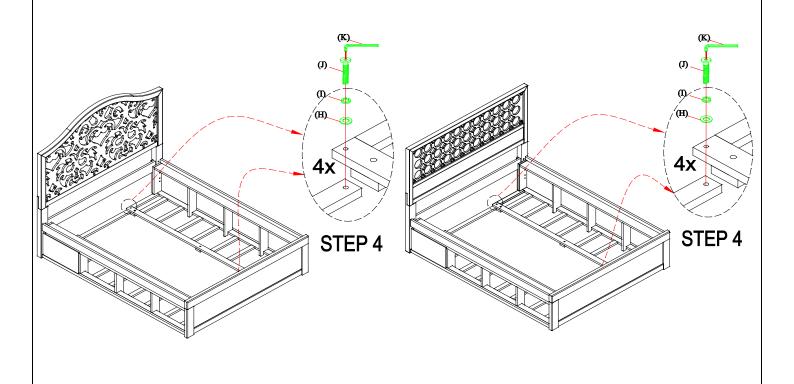


Date: 13-Nov-15 www. pbteen.com Page 4 of 6


8. Install the drawer box to the Side rail by sliding onto the glides and push it all the way in as seen in illustration below.

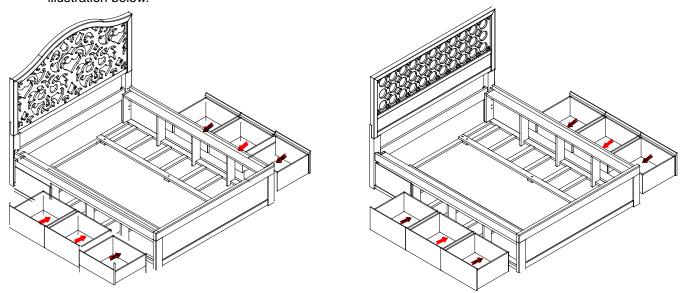


9. Attach a Support Legs (F) to the Support slat (E) by aligning the hanger bolts to the insert nuts and rotate

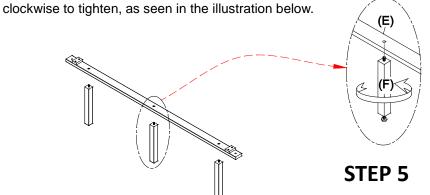

10. Attach Slat (D) to Support slat (E) by using Flat Washer (N), Lock Washer (M), and Allen Bolt (L). Tighten

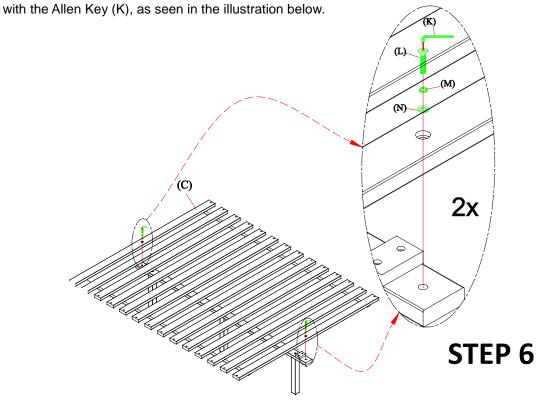

Date: 13-Nov-15 www. pbteen.com Page 5 of 6

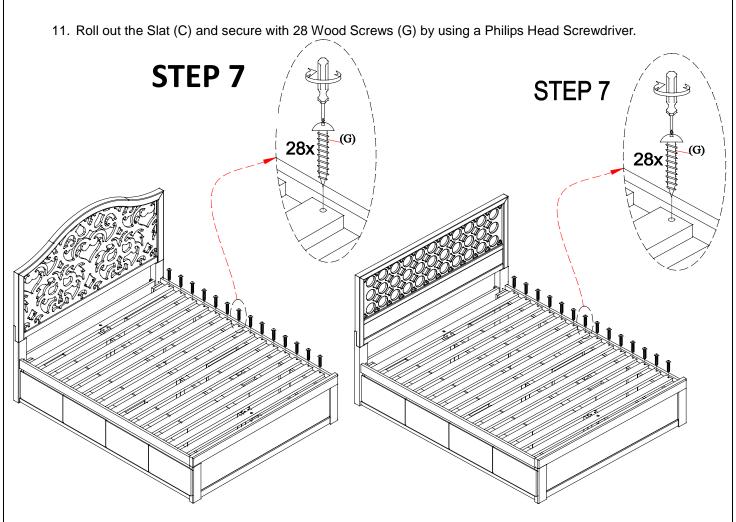

12. Assembly is completed.

Care Instructions:

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight.
 Re-tighten if necessary.

Thank you for your purchase Stores | catalog

Date: 13-Nov-15 www. pbteen.com Page 6 of 6