# POTTERYBARN





### **Important Safety Instructions:**


- · Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

### Pre-assembly:


- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as
  this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

#### Parts Included:

- (A) Headboard 1x
- (B) Foot board 1x
- (C) Side Rail 2x
- (D) Support Leg Full 2x Queen 2x King/Cal King 3x
- (E) Five Slat System
- (F) Bed Leg 4x

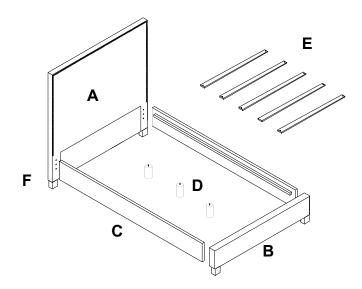

#### Hardware Included:

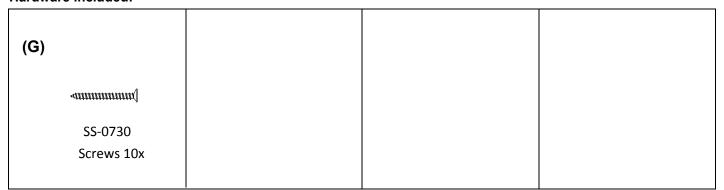

**Tools Required:** 




Phillips Head Screwdriver (not included)

**12/06/18** www. potterybarn.com **1/2** 

## **Assembly Instructions Steps:**

- 1. With assistance place the headboard in the room as desired. Check to make sure the headboard and footboard legs are properly secured and tightened.
- 2. Align hooks on side rails with the headboard. Slide in and down to secure. Repeat this process on the footboard.

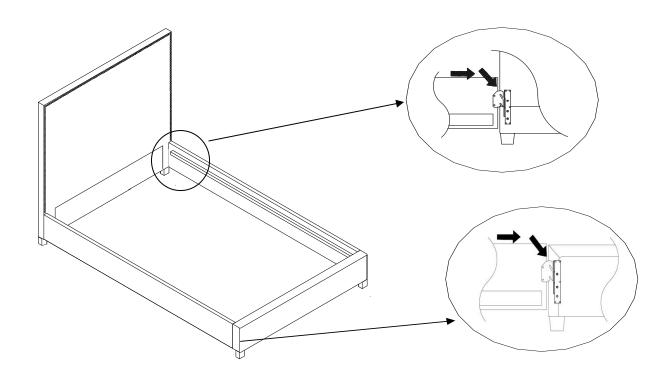

3. Screw support leg (D) onto slat (E) until secure and tight. Lay slats on cleat rail. Using a Phillips head screwdriver and screws provided (G), screw each slat down to the cleat rail until secured.



Countersink hole towards up.

