

FLORAL CUT OUT HEADBOARD

Date: 7-Dec-15

Rev:


Important Safety Instructions:

- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:


- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.

• The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split

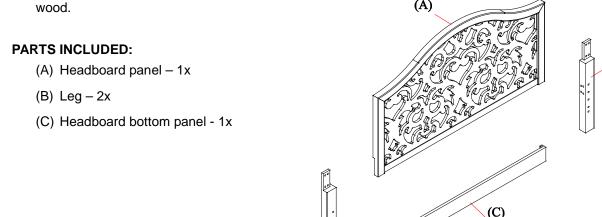


(B1)

HARDWARE INCLUDED:

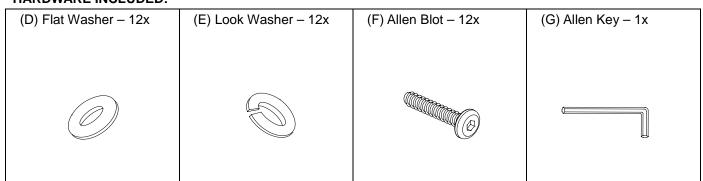

Hardware for assembly with simple base or storage base or metal bed frame (not include):

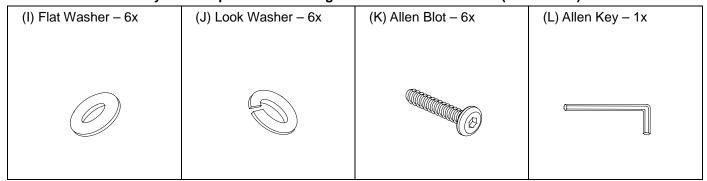

Date: 7-Dec-15 www. pbteen.com


Rev:

(B2)

ASSEMBLY INSTRUCTION STEPS:


Note: The Floral Cut Out HB is fully assembled and ready to connect with simple base or storage base for using

- 1. Attach Headboard bottom panel (C) to Leg (B1.B2) by using Flat Washer (D), Lock Washer (E), and Allen Bolt (F). Tighten with the Allen Key (G), as seen in the illustration below.
- 2. Repeat above step for Legs (B1.B2) and Headboard bottom panel (C) to Headboard (A), as seen in the illustration below.

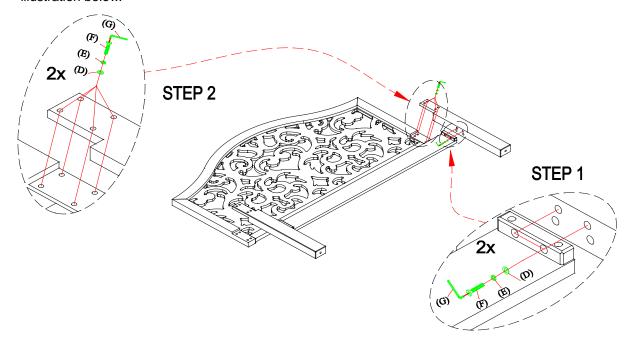


ASSEMBLY WITH SIMPLE BASE (Sold separately)

- 1. Attach the headboard to two side rails of simple base by aligning the pre-drilled hole on the headboard post with exposed hole on the side rails.
- 2. Secure the headboard with Flat washer (I), Lock washer (J) and Allen Bolt (K) using Allen Key (L).

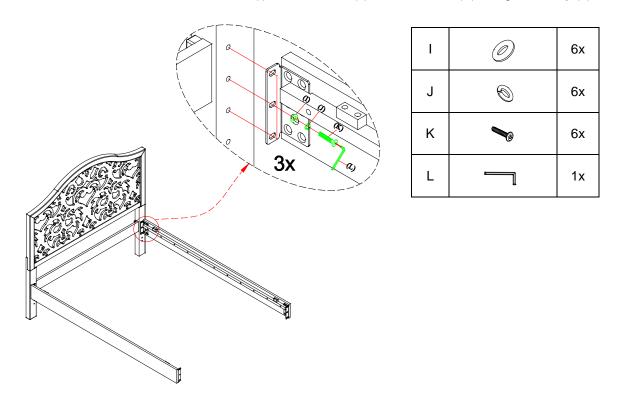


Date: 7-Dec-15

3. Roll out the slat roll of simple base on two side rails and then secure with wood screws (get from simple base box)

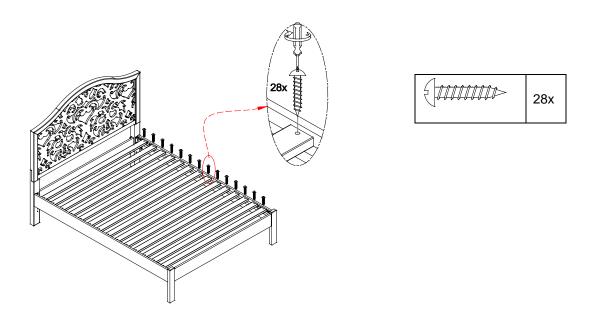

ASSEMBLY WITH STORAGE BASE (Sold separately)

Same as assembly with simple base. Keep the extra bolt and washers for later use.

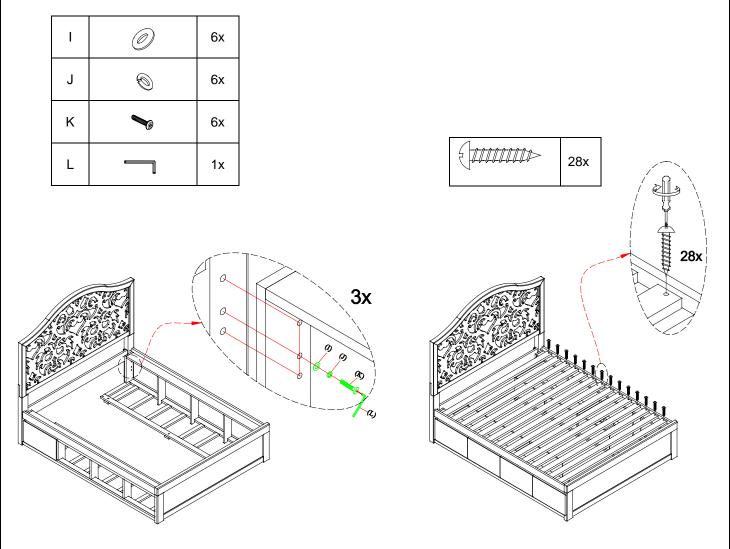


Date: 7-Dec-15 www. pbteen.com Page 4 of 5

Rev:

ASSEMBLY WITH METAL BOX FRAME (Sold separately)

Note: Preassembled the box frame first. Make sure the face plate of the box frame is set at high position.

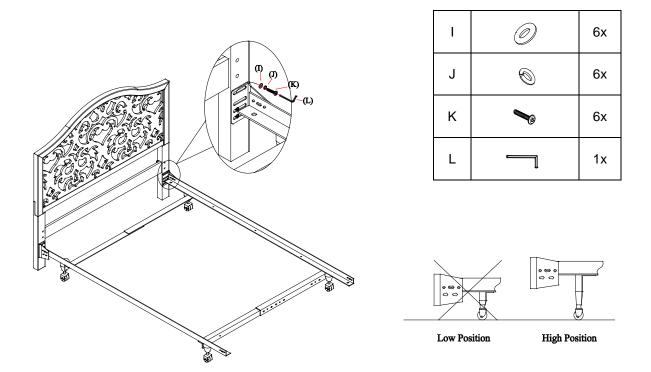

Assembly is completed.

Care Instructions:

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight.
 Re-tighten if necessary.

Thank you for your purchase Stores | catalog

Date: 7-Dec-15 Rev: