

# Wall Mirror Storage

**Note:** This hanging system is meant for drywall/wood stud mounting only. If your walls are made from another material, such as concrete, brick or plaster, please consult your local hardware store for assistance. For safety and ease of mounting, installation is recommended using two people.

## Parts Included:

A		c Vananan	D	E
Wall-mount Bracket	Anchors	Screws	D. Plastic Anchors	E. Screws
1PC	2PCS	2 PCS	1PC	1PC

## Tools required for mounting (not included):

Screwdriver, Level, Pencil, Tape Measure

This item is mounted to a wall using a classic French cleat system. A wall cleat is mounted to the wall and is sized and shaped to engage with a product cleat located on the rear of the product. When you receive this product, the wall cleat should be taped in engagement with the product cleat. Do not remove the cleat yet.

## MOUNTING INSTRUCTIONS:


- 1. With the help of a friend, hold the product against the wall at a desired hanging location. Use a level to make sure the product is level and lightly mark the wall along the entire top edge of the product with a pencil. Set the product aside with access to the rear surface.
- You will notice that a removable wooden wall cleat is taped in place on the rear of the product. Keeping the cleat in place, use a tape measure to measure a "cleat distance" between the top edge of the product and the lower edge of the removable wall cleat. Record this measurement and remove the cleat.
- Use the pencil and the tape measure to draw a second line located below the line you made in Step (1). The second lower line is spaced the distance you measured in Step (2).
- 4. Now hold the cleat against the wall so that its bottom edge aligns with the second lower line. Orient the cleat so that the sharp edge of the cleat is positioned up and away from the wall, as shown in the illustration. While holding the cleat level, use the pencil (or a sharp implement, such as one of the provided long screws) to mark the wall through the two holes of the cleat. Set the cleat aside.
- 5. Use a screwdriver to install a anchor (B) into the wall at each of the two marks made in Step (4). Rotate the anchor clockwise while pushing it gently into the wall until the wide head of the anchor becomes even with the wall surface. Do not over-tighten. Repeat this step with the other mark and anchor.
- 6. Place the cleat so that the holes align with the installed anchors and use the screwdriver to secure a screw (C) through the cleat and into the installed anchor. Rotate the screws clockwise until tight.

7. With help of another person, lift the product over the cleat. Gently lower the product until the cleat on product firmly engages the wall-mounted cleat. Before releasing your grip on the product, gently pull the top part of the product to confirm that the cleats are engaged.

## Secure the Tie-Down Plate to the Wall (Optional)

A tie-down plate is provided to help prevent accidentally bumping the secured item off the engaged French cleats and to further hold the item to the wall.

- 8. Rotate the lower tie-down plate located on the bottom of product to vertical position, as shown in the illustration. Mark the wall through the screw hole of the plate. Rotate the plate aside and use a 6mm size drill bit to drill a hole at the mark.
- 9. Insert the plastic anchor (D) into the hole and then return the tie-down plate so that the hole aligns with the installed anchor. Use the screwdriver to secure the screw (E) into the installed anchor so that the plate is secured to the wall.

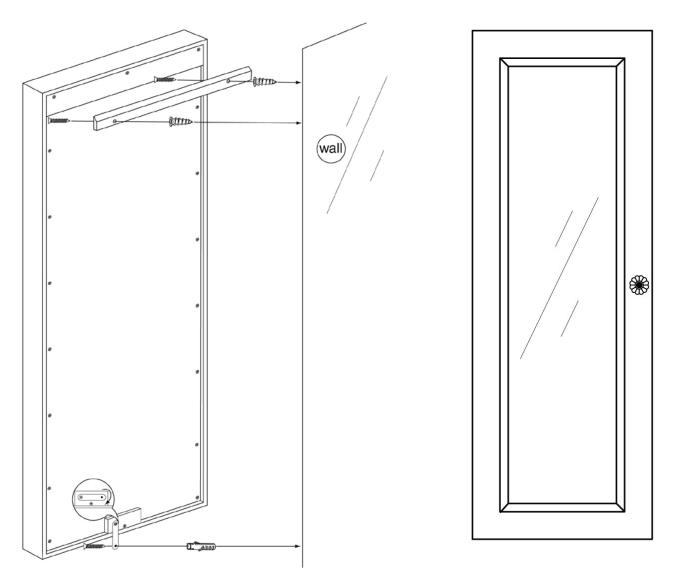

## CARE INSTRUCTIONS:

- Dust often using a soft, dry cloth
- Do not use strong chemical or abrasive cleaners.

Thank you for your purchase! www.pbteen.com