

### Catalina Beaded Chandelier With White Finish – Plug-in Assembly Instructions

### **CAUTION:**

• **Do not install into a ceiling that contains radiant heating**. Also note that the Toggle Hook (B) or Large Screw Hook (A) that are included with this Catalina Beaded Chandelier are used to support the Chain (E) only. Do not use the electric cord only (without chain) to support the weight of the lighting fixture.

### **IMPORTANT SAFETY INSTRUCTIONS:**

- This portable luminaire has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug. Do not attempt to defeat this safety feature.
- The installation is not to be made on a radiant-heating ceiling.
- Wood ceiling joist mounting is recommended. Use proper hardware for your ceiling type.
- The Toggle Hooks (B) or Large Screw Hook (A) & Small Screw Hooks (D) are used to engage the Chain (E) and Plastic Clips (C) only and not the electric cord. Do not use the electric cord to support the weight of the chandelier.
- For your safety, it is strongly recommended that two people install the lighting fixture.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling and installing the fixture.
- This fixture has been rated for up to two (2) 40-Watt maximum Type B (candelabra) standard incandescent light bulbs (not included) or two (2) 9-Watt compact fluorescent bulbs (included for California customers only). To avoid the risk of fire, do not exceed the recommended lamp wattage.
- · Save these instructions.

### **WARNING:**

- To reduce the risk of fire, electrical shock or personal injury, always turn off and unplug light fixture and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

## **Pre-assembly:**

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- For your safety and convenience, assembly by two people is recommended.

#### Parts Enclosed:

#### (1) Chain (E)

- (2) Closable Links with Screw Caps (F)
- (1) Cord with Switch (G)
- (2) Sockets (H)

#### Hardware Included:

- (1) Large Screw Hook (A)
- (3) Toggle Hooks (B)
- (3) Plastic Clips (C)
- (2) Small Screw Hooks (D)

TOOLS REQUIRED (not included): Ladder, Pliers, Drill & Drill bit.

# To adjust the suspension length of the fixture:

- 1. Note: The adjustment or shortening of the lighting fixture's suspension length is only needed if the factory set chain length is not appropriate for your installation.
- 2. The chain length may be shortened from either end, if desired, by using pliers to separate a link along a split-line formed in each link. Use two pairs of pliers to gently pry the link apart so that a space is created large enough for the link to be removed from the remaining chain. Use a cloth or folded piece of paper between the pliers and the link to protect the finish of the link during bending. For longer lengths of chain to be removed, select the desired link from either end to open and remove the length of chain. Once the chain is at the desired length, reattach the chain (if it isn't already) to the two Closable Links with Screw Caps (F) at each end of the Chain (E). Secure each link by tightening the Screw Caps. One Closable Link with Screw Cap (F) must be attached to both the bottom loop of Chain (E) and the Fixture Ring at the top of the chandelier and the other Closable Link with Screw Cap (F) must be attached to the other, upper end loop of the Chain (E).

## **Assembly & Installation Instructions:**


- 1. Carefully unpack all fixture parts and hardware and lay them out on a clear workspace.
- 2. Determine the desired mounting location of the Catalina Beaded Chandelier on the ceiling making sure that an outlet is located within reach.
- 3. If needed, use a "stud finder" (not included) to locate the ceiling wooden joists and mark their locations on the ceiling using a pencil or a piece of tape.
- 4. Insert the Large Screw Hook (A) and Small Screw Hooks (D) into the ceiling joists at the desired locations. Rotate each hook clockwise while firmly pressing it into the ceiling. Tighten hooks securely into wood. If installing through drywall to wood joist, the threaded portion of each hook will drive itself into the drywall and then into the underlying wooden ceiling joist. Note: Pre-drilling a pilot hole at the marked locations will make installing the hooks easier.
- 5. If mounting into ceiling drywall only, use the **assembled** Toggle Hooks (B) inserted through three predrilled ceiling holes using the drill with appropriate size drill bit (one that is sized just large enough to make a hole that will allow passage of the folded wings of the toggle). Make sure the Toggle Hooks (B) are fully inserted into the ceiling and the toggle wings are open. Use your hand to rotate the nuts on the Toggle Hooks (B) in a clockwise direction until the flat washers are tight against the ceiling.
- 6. Unscrew the Screw Cap on the Closable Link (F) and insert the bottom loop of Chain (E) and the Fixture Ring at the top of the chandelier into the Closable Link (F). Tighten the Closable Link Screw Cap.
- 7. Unscrew the Screw Cap on the Closable Link (F) and insert the top loop of Chain (E) into the Closable Link (F). Tighten the Closable Link Screw Cap.
- 8. Once the hooks are installed into the ceiling, position the chandelier's chain top Closable Link with Screw Cap (F) onto the Large Screw Hook (A) or one of the Toggle Hooks (B) depending upon mounting method as installed above
- 9. Position the three Plastic Clips (C) along the cord so that they align with the installed hooks on the ceiling. Carefully fit each Plastic Clip (C) as shown in Fig. 1, onto the Large Screw Hook (A) and Small Screw Hooks (D) or Toggle Hooks (B) depending upon mounting method as installed above
- Insert two (2) 40-Watt maximum Type B (candelabra) standard incandescent light bulbs (not included) or two (2)
  9-Watt compact fluorescent bulbs (included for California customers only) into Sockets (H). DO NOT EXCEED THE SPECIFIED WATTAGE
- 11. Plug fixture into the proper electrical outlet and test fixture.
- 12. Installation is complete.


#### **Care Instructions:**

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

## FOR MOUNTING TO JOIST

## FOR DRY WALL MOUNTING

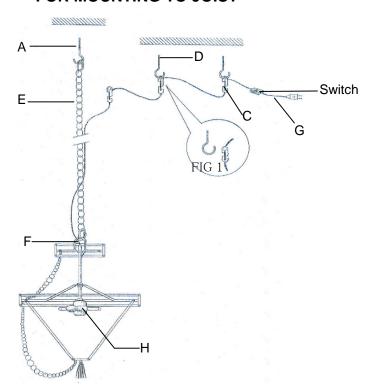

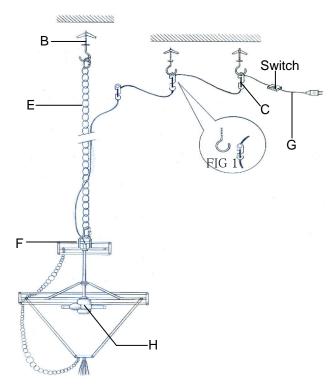

thank you for your purchase www.pbteen.com